


BAITCASTING REEL

CLTW80HL

*Please order by parts number, not key number.

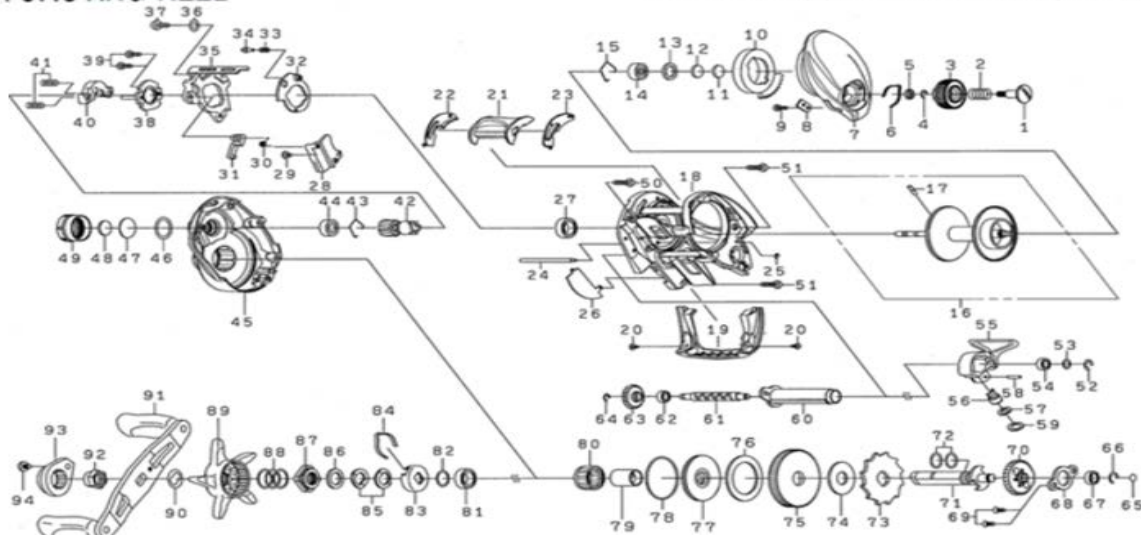

Key No	Part No	Description
1	J71-6301	BRAKE DIAL SCREW
2	E16-7101	BRAKE DIAL SPRING
3	M16-0704	BRAKE DIAL
4	B33-9801	BRAKE DIAL RETAINER (A)
5	F63-7701	BRAKE DIAL WASHER
6	H66-3401	BRAKE DIAL LEAF SPRING
7	M36-9301	RIGHT SIDE PLATE
8	J84-3301	BRAKE DIAL RETAINER (B)
9	G93-9301	BRAKE DIAL RETAINER (B) SCREW
10	M16-2401	MAGNET HOLDER
11	375-7404	RS BALL BEARING WASHER (A) (0.1MM)
12	375-7411	RS BALL BEARING WASHER (B)
13	G18-5101	RS BALL BEARING WASHER (C)
14	G51-1501	RS BALL BEARING
15	F03-2201	RS BALL BEARING RETAINER
16	M36-8601	SPOOL ASSEMBLY (16 17)
18	M21-2404	FRAME
19	J95-6609	FRONT COVER
20	H53-1508	FRONT COVER SCREW
21	M16-2301	CLUTCH LEVER
22	J95-5601	CLUTCH LEVER PLATE (L)
23	J95-5501	CLUTCH LEVER PLATE (R)
24	M13-4001	STABILIZER BAR
25	H70-4101	STABILIZER BAR RETAINER
26	J95-5701	FRAME PLATE
27	G43-1002	CLUTCH CAM BALL BEARING
28	J76-5701	CLUTCH TRIP LEVER PLATE (A)
29	H53-1508	CLUTCH TRIP LEVER PLATE (A) SCREW
30	J91-5301	CLUTCH TRIP LEVER PLATE SPRING
31	J63-8601	CLUTCH TRIP LEVER
32	J76-5601	CLUTCH CAM PLATE (A)
33	H92-8801	CLUTCH CAM PLATE PIN SPRING
34	J05-5201	CLUTCH CAM PLATE PIN
35	J95-5801	CLUTCH CAM
36	M07-0001	CLUTCH CAM WASHER
37	B36-0406	CLUTCH CAM SCREW
38	H65-9101	CLUTCH CAM PLATE (B)
39	B03-2904	CLUTCH CAM PLATE SCREW
40	H94-4401	YOKE
41	J31-3901	YOKE SPRING
42	Z02-6882	PINION DRIVE GEAR SET
43	H44-8401	PINION BEARING RETAINER
44	G43-1107	PINION BALL BEARING
45	M36-9201	LEFT SIDE PLATE
46	J69-2001	ZERO ADJUSTER KNOB O RING
47	B17-5503	ZERO ADJUSTER WASHER (A)
48	J27-9701	ZERO ADJUSTER WASHER (B)

Key No	Part No	Description
49	J73-8101	ZERO ADJUSTER KNOB
50	G04-0814	LS PLATE SCREW (A)
51	G94-5818	LS PLATE SCREW (B)
52	320-5901	WORM SHAFT RETAINER
53	B41-1702	WORM SHAFT WASHER (01MM)
54	G72-0001	WORM SHAFT COLLAR
55	M14-8601	LEVELWIND
56	J74-0101	PAWL
57	M16-1301	PAWL WASHER (0.1MM)
58	J74-0201	LEVELWIND PIN
59	G25-2202	PAWL O RING
60	J76-5801	WORM SHIELD
61	M04-2401	WORM SHAFT
62	G72-0001	WORM SHAFT COLLAR
63	J69-3901	WORM SHAFT GEAR
64	B33-9801	WORM SHAFT GEAR RETAINER
65	G09-9801	GEAR SHAFT WASHER (01MM)
66	320-8002	GEAR SHAFT RETAINER
67	F64-8301	GEAR SHAFT BUSHING
68	J69-3701	GEAR SHAFT PLATE
69	G29-7002	GEAR SHAFT PLATE SCREW
70	J69-3601	WORM GEAR
71	M37-2502	DRIVE SHAFT
72	F65-7801	DRIVE SHAFT O RING
73	H66-0901	RATCHET
74	374-6605	DRIVE GEAR WASHER
75	Z02-6882	PINION DRIVE GEAR SET
76	J60-5701	ATD DRAG WASHER(B323)
77	M37-2401	KEY WASHER
78	J45-8101	KEY WASHER O RING
79	J32-7701	CLUTCH RING
80	J54-0401	ONEWAY CLUTCH
81	G43-1002	DRIVE BALL BEARING
82	B55-3801	DRIVE BALL BEARING WASHER
83	F02-8203	CLICK SPRING HOLDER
84	F03-2401	CLICK LEAF SPRING
85	150-8901	DRAG SPRING WASHER
86	H92-9501	STAR DRAG WASHER
87	J14-1002	DRAG METAL
88	J01-1901	DRAG METAL SPRING
89	J14-0012	STAR DRAG
90	F57-6601	HANDLE WASHER
91	M36-9001	HANDLE ASSEMBLY
92	G79-3308	HANDLE NUT
93	J62-5401	HANDLE LOCK PLATE
94	G83-5503	HANDLE LOCK PLATE SCREW