


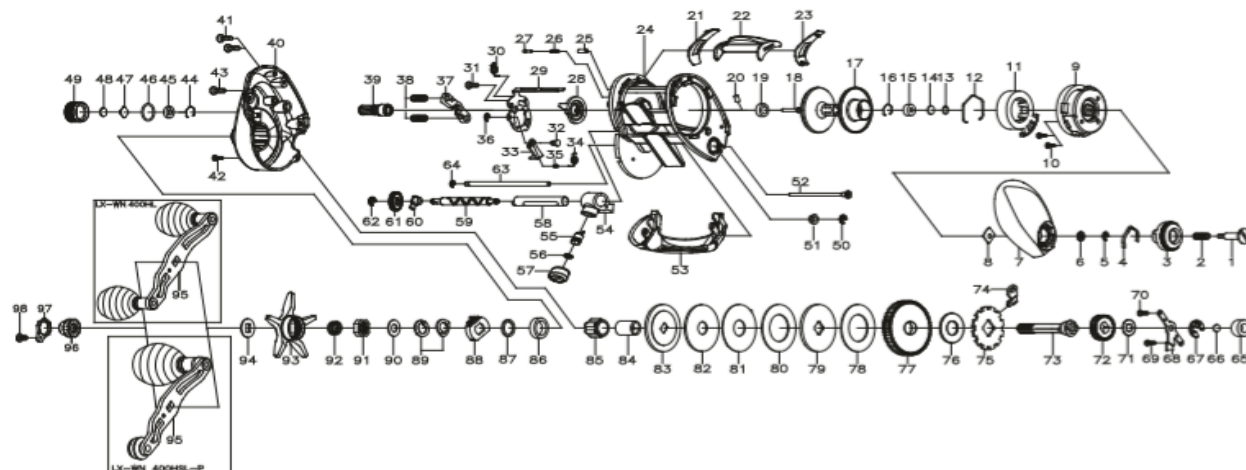

## LX - WN 400HSL-P / H L

Please order by parts number, not key number  
Veuillez indiquer le numéro de la pièce (Non "Key" No.)



| Key No | Part No  | Description             |
|--------|----------|-------------------------|
| 1      | 460-5620 | Set plate screw         |
| 2      | 510-4450 | Set plate spring        |
| 3      | 550-1700 | Brake adjusting knob    |
| 4      | 510-5341 | Brake click spring      |
| 5      | 200-0530 | Brake dial retainer(A)  |
| 6      | 540-5380 | Washer                  |
| 7      | 702-2550 | Right side plate        |
| 8      | 410-2720 | Brake dial retainer(B)  |
| 9      | 230-2600 | Set plate               |
| 10     | 460-3220 | Screw                   |
| 11     | 240-2290 | Magnet holder           |
| 12     | 430-1070 | Magnet holder ret. Ring |
| 13     | 540-8120 | Washer                  |
| 14     | 540-8110 | Spacer(A)               |
| 15     | 140-3310 | Ball bearing            |
| 16     | 430-0440 | Bearing retainer        |
| 17~20  | 702-2460 | Spool assembly          |
| 21     | 410-2680 | Spacer (B)              |
| 22     | 090-0290 | Clutch lever            |
| 23     | 410-2670 | Spacer (C)              |
| 24     | 702-2530 | Frame                   |
| 25     | 400-2570 | Pin                     |
| 26     | 510-5310 | Spring                  |
| 27     | 400-2720 | Pin                     |
| 28     | 170-1380 | Clutch cam              |
| 29     | 410-2730 | Plate                   |
| 30     | 510-5330 | Spring                  |
| 31     | 460-1290 | Screw                   |
| 32     | 400-3310 | Kick lever pin          |
| 33     | 330-2951 | Kick lever              |
| 34     | 510-5320 | Kick lever spring       |
| 35     | 210-2410 | bushing                 |
| 36     | 200-0570 | E-Clip                  |
| 37     | 410-2751 | Yoke                    |
| 38     | 510-6040 | Yoke spring             |
| 39     | 260-2021 | Pinion gear             |
| 40     | 702-2540 | Left side plate         |
| 41     | 460-5790 | Screw                   |
| 42     | 460-4870 | Screw                   |
| 43     | 460-7430 | Screw                   |
| 44     | 430-1061 | Bearing retainer        |
| 45     | 150-2060 | Bushing                 |
| 46     | 430-1000 | O-Ring                  |
| 47     | 540-6460 | Spacer                  |
| 48     | 540-5980 | Spacer                  |
| 49     | 388-1990 | Cast control cap        |
| 50     | 200-0580 | Worm shaft retainer     |
| 51     | 150-2260 | Bushing                 |
| 52     | 460-5320 | Long screw              |
| 53     | 558-1720 | Frame plate             |
| 54     | 490-1102 | Line guide              |

| Key No | Part No  | Description               |
|--------|----------|---------------------------|
| 55     | 400-2540 | Line guide pawl           |
| 56     | 540-3980 | Washer                    |
| 57     | 380-0780 | Line pawl cap             |
| 58     | 270-0870 | Level wind guard          |
| 59     | 470-2430 | Worm shaft                |
| 60     | 150-1050 | Bushing                   |
| 61     | 240-2300 | Worm shaft gear           |
| 62     | 200-0530 | Gear retainer             |
| 63     | 40A-3380 | Pillar                    |
| 64     | 200-1160 | E-Clip                    |
| 65     | 140-2030 | Ball bearing              |
| 66     | 540-7250 | Washer                    |
| 67     | 200-0580 | Drive gear shart retainer |
| 68     | 410-2740 | Plate                     |
| 69     | 460-5290 | Screw                     |
| 70     | 460-5370 | Screw                     |
| 71     | 540-6600 | Washer                    |
| 72     | 240-2260 | Oscillation gear          |
| 73     | 470-2500 | Drive shaft               |
| 74     | 530-0860 | Anti-reverse pawl         |
| 75     | 240-3030 | Anti-reverse ratchet      |
| 76     | 540-6670 | Spacer (F)                |
| 77     | 250-1570 | Drive gear                |
| 78     | 540-7100 | Washer                    |
| 79     | 540-8060 | Key washer                |
| 80     | 540-9890 | Drag washer               |
| 81     | 540-8100 | Key washer                |
| 82     | 540-8090 | Drag washer               |
| 83     | 540-8070 | Top washer                |
| 84     | 150-2270 | Gear shaft collar         |
| 85     | 140-2000 | Roller clutch             |
| 86     | 140-2040 | Ball bearing              |
| 87     | 540-6250 | Spacing washer            |
| 88     | 510-5370 | Plate                     |
| 89     | 540-6391 | Drag spring washer        |
| 90     | 540-9021 | Washer                    |
| 91     | 380-3220 | NUT                       |
| 92     | 510-6130 | Spring                    |
| 93     | 320-1480 | Star drag                 |
| 94     | 540-9271 | Washer                    |
| 95     | 702-2470 | handle assembly           |
| 96     | 380-1930 | Handle nut                |
| 97     | 418-2500 | Handle nut plate          |
| 98     | 460-4260 | Screw                     |

### LX-WN400HL Special Parts

| Key No | Part No  | Description     |
|--------|----------|-----------------|
| 39     | 260-2011 | Pinion gear     |
| 40     | 702-2540 | Left side plate |
| 77     | 250-1560 | Drive gear      |
| 95     | 702-2510 | handle assembly |