


DAIWA

BAITCASTING REEL

TTU300P

*Please order by parts number, not key number.

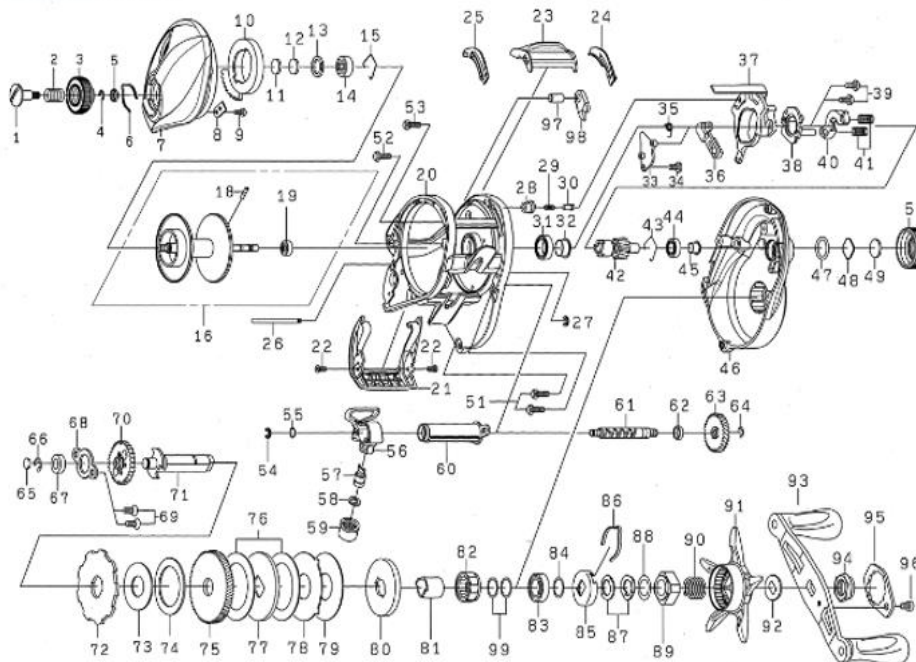

Key No	Part No	Description
1	J71-6301	BRAKE DIAL SCREW
2	E16-7101	BRAKE DIAL SPRING
3	J93-5801	BRAKE DIAL
4	B33-9801	BRAKE DIAL RETAINER (A)
5	F63-7701	BRAKE DIAL WASHER
6	J93-5901	BRAKE DIAL LEAF SPRING
7	J97-5106	LS PLATE
8	J94-6901	BRAKE DIAL RETAINER (B)
9	G93-9301	BRAKE DIAL RETAINER(B) SCREW
10	J97-4501	MAGNET HOLDER
11	375-7406	LS BALL BEARING WASHER (A)(0.1MM)
12	375-7411	LS BALL BEARING WASHER (B)
13	G18-5101	LS BALL BEARING WASHER (C)
14	G51-1501	LS BALL BEARING
15	F03-2201	LS BALL BEARING RETAINER
16	J97-4601	SPOOL ASSEMBLY
18	G71-7501	SPOOL PIN
19	G49-8513	SPOOL BALL BEARING
20	J93-2406	FRAME
21	J93-5506	FRONT COVER
22	H53-1511	FRONT COVER SCREW
23	J93-3101	CLUTCH LEVER
24	J93-2501	CLUTCH LEVER PLATE (R)
25	J93-2601	CLUTCH LEVER PLATE (L)
26	J93-5601	STABILIZER BAR
27	H70-4101	STABILIZER BAR RETAINER
28	H91-0601	CLUTCH CAM PLATE PIN SPRING COLLAR
29	H92-8801	CLUTCH CAM PLATE PIN SPRING
30	J05-5201	CLUTCH CAM PLATE PIN
31	G15-6805	CLUTCH CAM BALL BEARING
32	J94-6501	CLUTCH CAM BEARING COLLAR
33	J93-3001	CLUTCH TRIP LEVER PLATE
34	H29-4101	CLUTCH TRIP LEVER PLATE (A) SCREW
35	H45-0001	CLUTCH TRIP LEVER SPRING
36	J93-3201	CLUTCH TRIP LEVER
37	J97-3701	CLUTCH CAM
38	J93-2901	CLUTCH CAM PLATE
39	B03-2904	CLUTCH CAM PLATE SCREW
40	M10-5701	YOKE
41	J97-7701	YOKE SPRING
42	M12-3701	PINION GEAR
43	H16-0801	PINION BEARING RETAINER
44	G46-7102	PINION BALL BEARING
45	J95-3001	PINION BEARING COLLAR
46	J97-3617	RS PLATE
47	B05-5201	MECHANICAL BRAKE O RING
48	J69-2001	MECHANICAL BRAKE WASHER (A)
49	B17-5503	MECHANICAL BRAKE WASHER (B)
50	J93-2301	MECHANICAL BRAKE KNOB

Key No	Part No	Description
51	G04-0830	RS PLATE SCREW (A)
52	G94-5819	RS PLATE SCREW (B)
53	G04-0832	RS PLATE SCREW (C)
54	320-5901	WORM SHAFT RETAINER
55	B41-1703	WORM SHAFT WASHER(01MM)
56	J97-3801	LEVELWIND
57	121-4212	PAWL
58	373-1303	PAWL WASHER(0.1MM)
59	F40-2801	PAWL HOLDER NUT
60	J93-4301	WORM SHIELD
61	J93-4101	WORM SHAFT
62	G72-0001	WORM SHAFT COLLAR
63	J93-4201	WORM SHAFT GEAR
64	B33-9801	WORM SHAFT GEAR RETAINER
65	G09-9801	GEAR SHAFT WASHER(01MM)
66	320-8002	GEAR SHAFT RETAINER
67	J93-3401	GEAR SHAFT BUSHING
68	M04-0001	GEAR SHAFT PLATE
69	G80-3505	GEAR SHAFT PLATE SCREW
70	J93-3501	WORM GEAR
71	J93-3301	DRIVE SHAFT
72	J93-4401	RATCHET
73	H66-1101	DRIVE GEAR WASHER (A)
74	H35-9001	DRIVE GEAR WASHER (B)
75	M12-3801	DRIVE GEAR
76	J93-4701	DRAG WASHER
77	J93-4801	KEY WASHER (A)
78	J93-4901	EARED WASHER
79	J97-4301	DRIVE SHAFT WASHER
80	J93-5001	KEY WASHER (B)
81	J37-7801	CLUTCH RING
82	G81-9801	ONEWAY CLUTCH
83	G43-1004	DRIVE BALL BEARING
84	B55-3801	DRIVE BALL BEARING WASHER
85	E70-9201	DRAG HOLDER
86	E71-5601	DRAG HOLDER LEAF SPRING
87	150-8901	DRAG SPRING WASHER
88	H92-9501	STAR DRAG WASHER
89	J93-5101	DRAG NUT
90	J01-1901	DRAG NUT SPRING
91	J97-5001	STAR DRAG
92	J10-1302	HANDLE WASHER
93	J97-4801	HANDLE ASSEMBLY
94	J09-0311	HANDLE NUT
95	H28-3605	HANDLE LOCK PLATE
96	H25-7003	HANDLE LOCK PLATE SCREW
97	J94-6701	STOPPER PIN
98	H27-0401	STOPPER PIN
99	B55-3802	DRIVE BALL BEARING WASHER