


DAIWA BAITCASTING REEL

TTUSV70L/HL/XHL

*Please order by parts number, not key number.

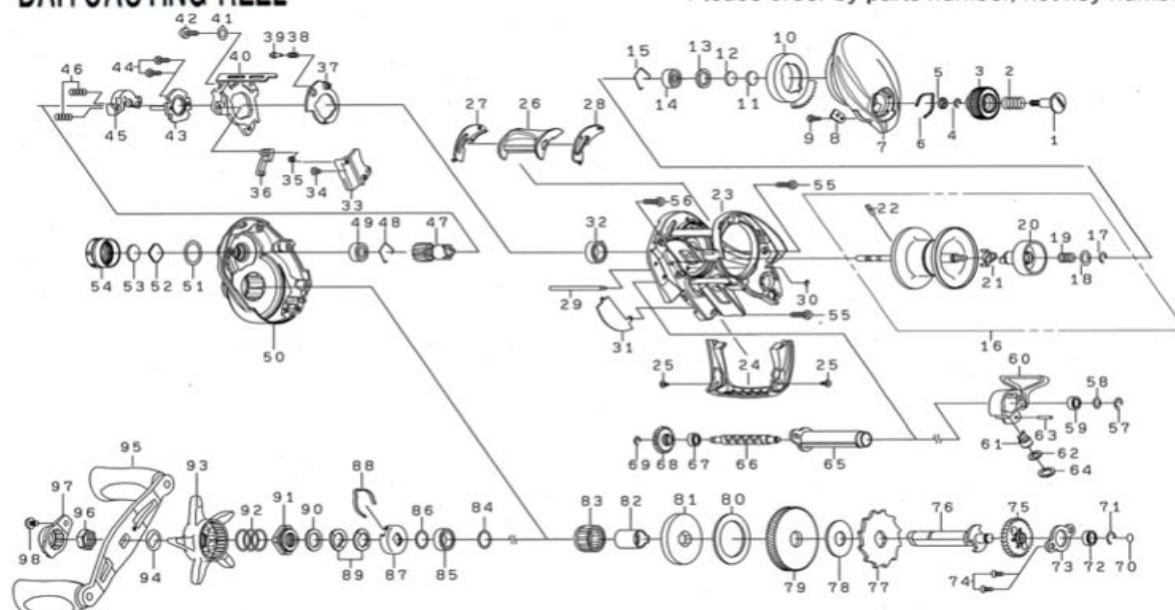

Key No Part No

Key No	Part No	Description
1	J71-6301	BRAKE DIAL SCREW
2	E16-7101	BRAKE DIAL SPRING
3	M16-0704	BRAKE DIAL
4	B33-9801	BRAKE DIAL RETAINER (A)
5	F63-7701	BRAKE DIAL WASHER
6	J88-6201	BRAKE DIAL LEAF SPRING
7	M27-1101	RS PLATE
8	J84-3301	BRAKE DIAL RETAINER (B)
9	G93-9301	BRAKE DIAL RETAINER (B) SCREW
10	M16-2401	MAGNET HOLDER
11	375-7404	RS BALL BEARING WASHER (A) (0.1MM)
12	375-7411	RS BALL BEARING WASHER (B)
13	G18-5101	RS BALL BEARING WASHER (C)
14	G51-1503	RS BALL BEARING
15	F03-2201	RS BALL BEARING RETAINER
16	Z02-6513	SPOOL ASSEMBLY (17-22)
23	M21-2402	FRAME
24	J95-6606	FRONT COVER
25	H53-1508	FRONT COVER SCREW
26	J95-6101	CLUTCH LEVER
27	J95-5501	CLUTCH LEVER PLATE (L)
28	J95-5601	CLUTCH LEVER PLATE (R)
29	M13-4001	STABILIZER BAR
30	H70-4101	STABILIZER BAR RETAINER
31	J95-5701	FRAME PLATE
32	B86-1705	CLUTCH CAM BALL BEARING
33	J76-5701	CLUTCH TRIP LEVER PLATE (A)
34	H53-1508	CLUTCH TRIP LEVER PLATE (A) SCREW
35	J91-5301	CLUTCH TRIP LEVER PLATE SPRING
36	J63-8601	CLUTCH TRIP LEVER
37	J76-5601	CLUTCH CAM PLATE (A)
38	H92-8801	CLUTCH CAM PLATE PIN SPRING
39	J05-5201	CLUTCH CAM PLATE PIN
40	J95-5801	CLUTCH CAM
41	M07-0001	CLUTCH CAM WASHER
42	B36-0406	CLUTCH CAM SCREW
43	H65-9101	CLUTCH CAM PLATE (B)
44	B03-2904	CLUTCH CAM PLATE SCREW
45	H94-4501	YOKE
46	J31-3901	YOKE SPRING
47-79	Z02-6206	PINION DRIVE GEAR SET
48	H44-8401	PINION BEARING RETAINER
49	G43-1102	PINION BALL BEARING
50	M27-1001	LS PLATE
51	J69-2001	ZERO ADJUSTER KNOB O RING
52	B17-5503	ZERO ADJUSTER WASHER (A)
53	J27-9701	ZERO ADJUSTER WASHER (B)
54	J73-8101	ZERO ADJUSTER KNOB
55	G94-5818	LS PLATE SCREW (A)
56	G04-0814	LS PLATE SCREW (B)

Key No Part No

Key No	Part No	Description
57	320-5901	WORM SHAFT RETAINER
58	B41-1703	WORM SHAFT WASHER (01MM)
59	G72-0001	WORM SHAFT COLLAR
60	M14-8601	LEVELWIND
61	J74-0101	PAWL
62	M16-1301	PAWL WASHER (0.1MM)
63	J74-0201	LEVELWIND PIN
64	G25-2202	PAWL O RING
65	J76-5801	WORM SHIELD
66	J91-2601	WORM SHAFT
67	G72-0001	WORM SHAFT COLLAR
68	J69-3901	WORM SHAFT GEAR
69	B33-9801	WORM SHAFT GEAR RETAINER
70	G09-9801	GEAR SHAFT WASHER (01MM)
71	320-8002	GEAR SHAFT RETAINER
72	G46-6202	GEAR SHAFT BALL BEARING
73	J69-3701	GEAR SHAFT PLATE
74	G29-7002	GEAR SHAFT PLATE SCREW
75	J69-3601	WORM GEAR
76	J95-6202	DRIVE SHAFT
77	H66-0901	RATCHET
78	374-6605	DRIVE GEAR WASHER
47-79	Z02-6206	PINION DRIVE GEAR SET
80	H35-9002	DRAG WASHER
81	J69-4401	KEY WASHER
82	J37-7801	CLUTCH RING
83	J54-0401	ONEWAY CLUTCH
84	B55-3804	DRIVE BALL BEARING WASHER (A)
85	B86-1705	DRIVE BALL BEARING
86	B55-3801	DRIVE BALL BEARING WASHER (B)
87	F02-8203	CLICK SPRING HOLDER
88	F03-2401	CLICK LEAF SPRING
89	150-8901	DRAG SPRING WASHER
90	H92-9501	STAR DRAG WASHER
91	J14-1002	DRAG METAL
92	J01-1901	DRAG METAL SPRING
93	J14-0011	STAR DRAG
94	F57-6601	HANDLE WASHER
95	J91-5901	HANDLE ASSEMBLY
96	H72-3702	HANDLE NUT
97	J21-3503	HANDLE LOCK PLATE
98	G04-0803	HANDLE LOCK PLATE SCREW

TTUSV70HL Special Parts

Key No	Part No	Description
47-79	Z02-6438	PINION DRIVE GEAR SET

TTUSV70XHL Special Parts

Key No	Part No	Description
47-79	Z02-6440	PINION DRIVE GEAR SET