


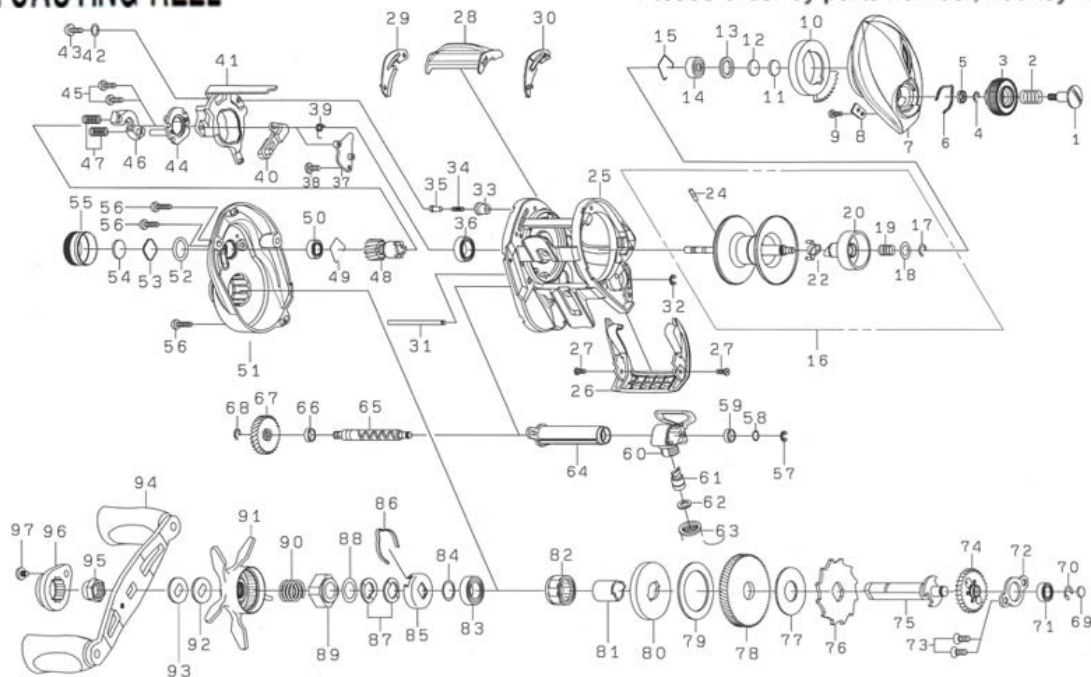

BAITCASTING REEL

TTUSVLTD103HL

*Please order by parts number, not key number.



Key No	Part No	Description
1	J71-6301	BRAKE DIAL SCREW
2	E16-7101	BRAKE DIAL SPRING
3	J69-4904	BRAKE DIAL
4	B33-9801	BRAKE DIAL RETAINER (A)
5	F63-7701	BRAKE DIAL WASHER
6	J88-6201	BRAKE DIAL LEAF SPRING
7	J71-6107	RS PLATE
8	J84-3301	BRAKE DIAL RETAINER (B)
9	G93-9301	BRAKE DIAL RETAINER (B) SCREW
10	J69-5001	MAGNET HOLDER
11	375-7400	RS BALL BEARING WASHER (A) (0.1MM)
12	375-7411	RS BALL BEARING WASHER (B)
13	G18-5101	RS BALL BEARING WASHER (C)
14	G51-1503	RS BALL BEARING
15	F03-2201	RS BALL BEARING RETAINER
16	Z02-6582	SPOOL ASSEMBLY (17 TO 24)
25	J71-5315	FRAME
26	J69-4611	FRONT COVER
27	H53-1508	FRONT COVER SCREW
28	J28-0701	CLUTCH LEVER
29	J69-2701	CLUTCH LEVER PLATE (L)
30	J69-2801	CLUTCH LEVER PLATE (R)
31	J28-1902	STABILIZER BAR
32	H70-4101	STABILIZER BAR RETAINER
33	J69-3401	CLUTCH CAM PLATE PIN SPRING COLLAR
34	H92-8801	CLUTCH CAM PLATE PIN SPRING
35	J05-5201	CLUTCH CAM PLATE PIN
36	B86-1704	CLUTCH CAM BALL BEARING
37	J71-5701	CLUTCH TRIP LEVER PLATE
38	H53-1508	CLUTCH TRIP LEVER PLATE SCREW
39	J40-7801	CLUTCH TRIP LEVER SPRING
40	J63-8601	CLUTCH TRIP LEVER
41	J71-5401	CLUTCH CAM
42	H15-9202	CLUTCH CAM SCREW WASHER
43	352-2501	CLUTCH CAM SCREW
44	H65-9101	CLUTCH CAM PLATE
45	B03-2904	CLUTCH CAM PLATE SCREW
46	H94-4401	YOKE
47	J31-3901	YOKE SPRING
48	J71-6402	PINION GEAR
49	E21-9701	PINION BEARING RETAINER
50	G43-1102	PINION BALL BEARING
51	J87-7307	LS PLATE
52	B05-5201	MECHANICAL BRAKE O RING
53	J21-3101	MECHANICAL BRAKE WASHER (A)
54	B17-5503	MECHANICAL BRAKE WASHER (B)
55	J90-9707	MECHANICAL BRAKE KNOB
56	G04-0831	LS PLATE SCREW

Key No	Part No	Description
57	320-5901	WORM SHAFT RETAINER
58	B41-1700	WORM SHAFT WASHER (01MM)
59	G72-0001	WORM SHAFT COLLAR
60	J24-3303	LEVELWIND
61	121-4212	PAWL
62	373-1300	PAWL WASHER (0.1MM)
63	F40-2801	PAWL HOLDER NUT
64	J71-5801	WORM SHIELD
65	J24-3601	WORM SHAFT
66	G72-0001	WORM SHAFT COLLAR
67	J69-3901	WORM SHAFT GEAR
68	B33-9801	WORM SHAFT GEAR RETAINER
69	G09-9800	GEAR SHAFT WASHER (01MM)
70	320-8002	GEAR SHAFT RETAINER
71	G46-6202	GEAR SHAFT BALL BEARING
72	J69-3701	GEAR SHAFT PLATE
73	E13-4509	GEAR SHAFT PLATE SCREW
74	J69-3601	WORM GEAR
75	J69-3504	DRIVE SHAFT
76	H66-0901	RATCHET
77	J08-5101	DRIVE GEAR WASHER
78	J71-6502	DRIVE GEAR
79	H35-9002	DRAG WASHER
80	J69-4401	KEY WASHER
81	J90-9901	CLUTCH RING
82	J54-0401	ONEWAY CLUTCH
83	B86-1704	DRIVE BALL BEARING
84	B55-3801	DRIVE BALL BEARING WASHER
85	F02-8203	CLICK SPRING HOLDER
86	F03-2401	CLICK LEAF SPRING
87	150-8901	DRAG SPRING WASHER
88	H92-9501	STAR DRAG WASHER
89	J10-2304	DRAG NUT
90	J01-1901	DRAG NUT SPRING
91	J67-3907	STAR DRAG
92	J10-2801	HANDLE WASHER (A)
93	J10-1301	HANDLE WASHER (B)
94	M28-7201	HANDLE ASSEMBLY
95	G79-3329	HANDLE NUT
96	J62-5401	HANDLE LOCK PLATE
97	G83-5504	HANDLE LOCK PLATE SCREW
200	M28-7301	HANDLE ARM
201	B41-1700	HANDLE KNOB WASHER
202	H74-4801	HANDLE KNOB SPRING WASHER
203	H81-3101	HANDLE KNOB
204	G72-0001	HANDLE KNOB BUSHING
205	G46-9005	HANDLE KNOB BALL BEARING
206	G46-9005	HANDLE KNOB SCREW