


BAITCASTING REEL

ZLNSVG100L_HL_XHL

*Please order by parts number, not key number.

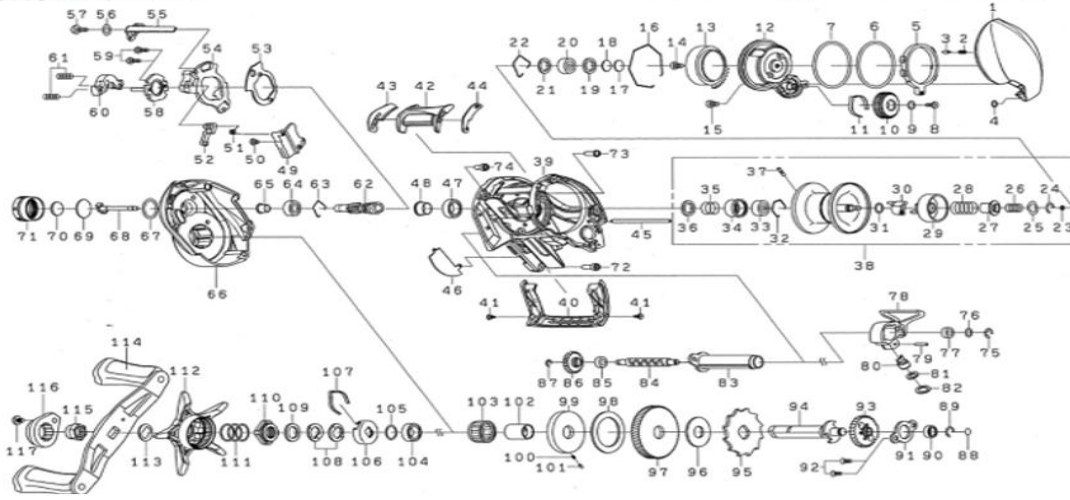

Key No	Part No	Description
1	M05-4501	RIGHT SIDE PLATE
2	J63-1901	LEVER PLATE SPRING
3	J28-6301	LEVER PLATE PIN
4	J19-7901	RIGHT SIDE PLATE O RING
5	M04-9001	LEVER PLATE (A)
6	J28-6101	LEVER PLATE (B)
7	J64-5201	LEVER PLATE (C)
8	G94-0402	BRAKE DIAL SCREW
9	H15-9201	BRAKE DIAL WASHER
10	M05-3601	BRAKE DIAL
11	J88-6201	BRAKE DIAL SPRING
12	M05-4601	SET PLATE
13	M05-4701	MAGNET HOLDER
14	H66-6002	SET PLATE SCREW (A)
15	G93-9303	SET PLATE SCREW (B)
16	J31-5701	MAGNET HOLDER RETAINER
17	375-7404	RS SPOOL ADJUST WASHER (A)
18	375-7411	RS SPOOL ADJUST WASHER (B)
19	G18-5101	RS SPOOL ADJUST WASHER (C)
20	G51-1503	RS BALL BEARING
21	G70-3201	RS BALL BEARING O RING
22	F03-2201	RS BALL BEARING RETAINER
23	H77-0601	SPOOL SHAFT O RING
24	320-8002	BRAKE CUP SPRING RETAINER
25	J49-7001	BRAKE CUP SPRING WASHER
26	M04-2201	BRAKE CUP SPRING (A)
27	M16-5701	BRAKE CUP COLLAR (A)
28	M04-2001	BRAKE CUP SPRING (B)
29	M05-5001	BRAKE CUP
30	M04-1701	BRAKE CUP COLLAR (B)
31	375-5202	BRAKE CUP WASHER
32	J14-9501	SPOOL BALL BEARING RETAINER
33	G51-1503	SPOOL BALL BEARING
34	H23-2201	SPOOL BALL BEARING COLLAR
35	M05-2601	SPOOL BALL BEARING SPRING
36	M05-2501	SPOOL BALL BEARING WASHER
37	H35-8801	SPOOL PIN
38	Z02-5976	SPOOL ASSY
39	M20-7601	FRAME
40	M04-1001	FRONT COVER
41	H53-1508	FRONT COVER SCREW
42	M04-8401	CLUTCH LEVER
43	M04-0501	CLUTCH LEVER PLATE (L)
44	M04-0601	CLUTCH LEVER PLATE (R)
45	M04-1101	STABILIZER BAR
46	M04-7901	FRAME PLATE
47	G43-1004	PINION BALL BEARING (A)
48	J76-4501	PINION BALL BEARING (A) COLLAR
49	M04-8301	CLUTCH TRIP LEVER PLATE (A)
50	H53-1508	CLUTCH TRIP LEVER PLATE (A) SCREW
51	M06-0601	CLUTCH TRIP LEVER PLATE SPRING
52	J63-8601	CLUTCH TRIP LEVER
53	M04-8201	CLUTCH CAM PLATE (A)
54	M04-8001	CLUTCH CAM
55	M04-8101	CLUTCH BAR
56	M07-0001	CLUTCH BAR WASHER
57	B36-0406	CLUTCH BAR SCREW
58	H65-9101	CLUTCH CAM PLATE (B)
59	B03-2904	CLUTCH CAM PLATE (B) SCREW
60	M15-7501	YOKE
61	J31-3901	YOKE SPRING
62.97	Z02-5977	PINION DRIVE GEAR SET
63	H44-8401	PINION BALL BEARING RETAINER

Key No	Part No	Description
64	B35-8608	PINION BALL BEARING (B)
65	J72-4601	PINION BALL BEARING (B) COLLAR
66	M16-6601	LEFT SIDE PLATE
67	J27-9701	ZERO ADJUSTER KNOB O RING
68	G93-1001	PINION SHAFT
69	H16-1001	ZERO ADJUSTER WASHER (A)
70	B17-5503	ZERO ADJUSTER WASHER (B)
71	J27-9601	ZERO ADJUSTER KNOB
72	G94-5811	LEFT SIDE PLATE SCREW (A)
73	G04-0802	LEFT SIDE PLATE SCREW (B)
74	G94-5818	LEFT SIDE PLATE SCREW (C)
75	320-5901	WORM SHAFT RETAINER
76	B41-1703	WORM SHAFT WASHER
77	G72-0001	WORM SHAFT BUSHING (A)
78	M05-4201	LEVELWIND
79	J74-0201	LEVELWIND PIN
80	J74-0101	PAWL
81	M16-1301	PAWL WASHER
82	G25-2202	PAWL O RING
83	M04-8901	WORM SHIELD
84	J24-3601	WORM SHAFT
85	G72-0001	WORM SHAFT BUSHING (B)
86	M04-8801	WORM GEAR
87	B33-9801	WORM GEAR RETAINER
88	G09-9801	DRIVE SHAFT WASHER
89	320-8002	DRIVE SHAFT RETAINER
90	G46-6202	DRIVE SHAFT BALL BEARING
91	J28-1101	DRIVE SHAFT PLATE
92	G29-7002	DRIVE SHAFT PLATE SCREW
93	M04-8601	DRIVE SHAFT GEAR
94	M04-8501	DRIVE SHAFT
95	H66-0901	RATCHET
96	E70-8901	DRIVE GEAR WASHER
98	H35-9001	DRAG WASHER
99	J74-0501	KEY WASHER
100	M02-5201	DRAG CLICK SPRING
101	J56-6201	DRAG CLICK PIN
102	G01-1401	ONEWAY CLUTCH COLLAR
103	J54-0401	ONEWAY CLUTCH
104	B86-1704	HANDLE BALL BEARING
105	B55-3801	HANDLE BEARING WASHER
106	F02-8203	CLICK SPRING HOLDER
107	F03-2401	CLICK LEAF SPRING
108	150-8901	DRAG SPRING WASHER
109	H92-9501	STAR DRAG WASHER
110	J14-1002	STAR DRAG METAL
111	J01-1901	STAR DRAG SPRING
112	J14-0005	STAR DRAG
113	F57-6601	HANDLE PLATE
114	M12-5001	HANDLE ASSEMBLY
115	G79-3310	HANDLE NUT
116	J62-5401	HANDLE LOCK PLATE
117	G83-5503	HANDLE LOCK PLATE SCREW

ZLNSVG100HL Special Parts

Key No	Part No	Description
62.97	Z02-5978	PINION DRIVE GEAR SET
66	M05-3901	LEFT SIDE PLATE

ZLNSVG100XHL Special Parts

Key No	Part No	Description
62.97	Z02-5979	PINION DRIVE GEAR SET
66	M16-6501	LEFT SIDE PLATE