


BAITCASTING REEL

ZLNTWHD1520XHL

*Please order by parts number, not key number.

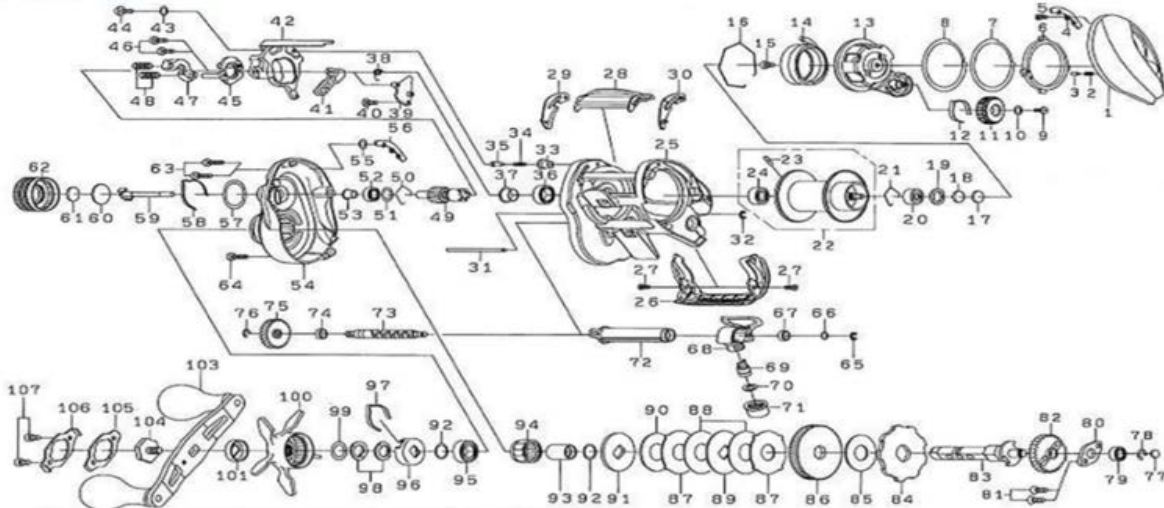

Key No	Part No	Description
1	J67-8701	RS PLATE
2	J63-1901	LEVER PLATE SPRING
3	J28-6301	LEVER PLATE PIN
4	J40-9802	GUARD PLATE (L)
5	H88-1504	GUARD PLATE SCREW
6	J66-4201	LEVER PLATE (A)
7	J28-6101	LEVER PLATE (B)
8	J64-5203	LEVER PLATE (C)
9	G94-0402	BRAKE DIAL SCREW
10	H15-9201	BRAKE DIAL WASHER
11	J28-2605	BRAKE DIAL
12	H66-3401	BRAKE DIAL LEAF SPRING
13	J66-4001	SET PLATE
14	J64-1301	MAGNET HOLDER
15	H66-6002	SET PLATE SCREW
16	J31-5701	MAGNET HOLDER RING
17	375-7404	RS BEARING WASHER(A)
18	375-7411	RS BEARING WASHER(B)
19	G18-5101	RS BEARING WASHER(C)
20	G51-1506	RS BALL BEARING
21	F03-2201	RS BALL BEARING RING
22	J67-7901	SPOOL UNT (22-24)
23	H35-8801	SPOOL PIN
24	G49-8511	SPOOL BALL BEARING RING
25	J67-8601	FRAME
26	J04-5206	FRONT COVER
27	H45-5407	FRONT COVER SCREW
28	J10-1601	CLUTCH LEVER
29	H91-5701	CLUTCH LEVER PLATE(L)
30	H91-5601	CLUTCH LEVER PLATE(R)
31	H91-2101	OSCILLATING POST
32	H70-4101	OSCILLATING POST RETAINER
33	H91-0601	CLUTCH CAM PLATE PIN SPRING COLLAR
34	H92-8801	CLUTCH CAM PLATE PIN SPRING
35	J05-5201	CLUTCH CAM PLATE PIN
36	G43-1002	CLUTCH CAM BALL BEARING
37	J76-4501	CLUTCH CAM BEARING COLLAR
38	H47-3301	KICK LEVER SPRING
39	H94-4301	KICK LEVER PLATE (A)
40	H29-4101	KICK LEVER PLATE (A) SCREW
41	J22-1501	KICK LEVER
42	H94-4001	CLUTCH CAM PLATE
43	H15-9201	CLUTCH CAM PLATE SCREW WASHER
44	352-2501	CLUTCH CAM PLATE SCREW
45	H65-9101	CLUTCH CAM PLATE (B)
46	B03-2904	CLUTCH CAM PLATE (B) SCREW
47	H94-4401	CLUTCH PLATE
48	J05-5301	CLUTCH PLATE SPRING
49	Z02-4807	PINION GEAR + DRIVE GEAR SET
50	H16-0801	PINION RING
51	J07-3501	PINION BEARING WASHER
52	J01-9303	PINION BALL BEARING (MAG BB)
53	J72-4501	PINION BEARING COLLAR
54	J81-8801	LS PLATE
55	H77-0601	GUARD PLATE (R) O-RING
56	J40-9802	GUARD PLATE (R)
57	H15-7002	MECHANICAL BRAKE O RING

Key No	Part No	Description
58	H16-0901	MECHANICAL BRAKE KNOB SPRING
59	H15-9601	PINION SHAFT
60	H16-1003	MECHANICAL BRAKE WASHER(A)
61	B17-5503	MECHANICAL BRAKE WASHER(B)
62	J09-7411	MECHANICAL BRAKE KNOB
63	G04-0822	LS PLATE SCREW(A)
64	G04-0821	LS PLATE SCREW(B)
65	320-5901	WORM SHAFT RETAINER
66	B41-1702	WORM SHAFT WASHER
67	G46-9001	WORM SHAFT BEARING
68	J17-6602	LEVEL WIND
69	121-4212	PAWL
70	373-1303	PAWL WASHER
71	F40-2801	PAWL HOLDER NUT
72	H94-4601	WORM SHIELD
73	J32-7601	WORM SHAFT
74	G46-9001	WORM SHAFT BEARING
75	H91-0501	WORM SHAFTGEAR
76	B33-9801	WORM SHAFT GEAR RETAINER
77	G09-9801	GEAR SHAFT WASHER
78	320-8002	GEAR SHAFT RETAINER
79	G53-8003	GEAR SHAFT BALL BEARING
80	H92-8901	GEAR SHAFT PLATE(A)
81	E13-4509	GEAR SHAFT PLATE SCREW
82	H91-2701	WORM GEAR
83	J64-0506	GEAR SHAFT
84	H92-9401	RATCHET
85	J08-5101	DRIVE GEAR WASHER
86	Z02-4807	PINION GEAR + DRIVE GEAR SET
87	G79-1301	DRAG LIP WASHER
88	G79-1402	DRAG WASHER (A)
89	F90-4902	DRAG DISC WASHER (A)
90	H11-8401	DRAG WASHER (B)
91	G35-8502	DRAG DISC WASHER (B)
92	B55-3802	CLUTCH RING WASHER
93	J32-7701	CLUTCH RING
94	G81-9801	ONEWAY CLUTCH
95	G43-1002	HANDLE BALL BEARING
96	F02-8203	DRAG HOLDER
97	F03-2401	DRAG HOLDER LEAF SPRING
98	150-8901	DRAG SPRING WASHER
99	H92-9501	STAR DRAG WASHER
100	H69-4108	STAR DRAG
101	F85-0401	HANDLE COLLAR
103	J67-7201	HANDLE ASSY
104	G77-9101	HANDLE SCREW
105	J67-7604	HANDLE LOCK PLATE (A)
106	J67-7701	HANDLE LOCK PLATE (B)
107	H25-7002	HANDLE LOCK PLATE SCREW
200	B41-1703	HANDLE KNOB WASHER
201	J67-2101	HANDLE KNOB
202	G46-9001	HANDLE KNOB BALL BEARING
203	G72-0001	HANDLE KNOB COLLAR
204	B67-9308	HANDLE KNOB SCREW
205	Z02-4056	HANDLE KNOB CAP (WITH O RING)
206	H10-0001	HANDLE KNOB CAP O RING