


SPINNING REEL

EXIGLT2000D-P_2500-XH

*Please order by parts number, not key number.

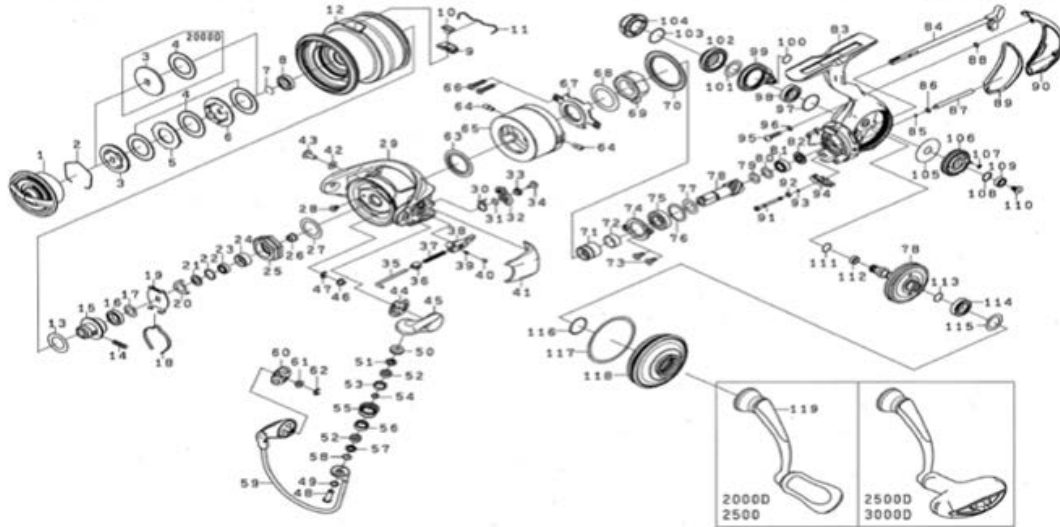

Key No	Part No	Description
1	M21-9301	DRAG KNOB
2	J55-6701	DRAG WASHER RETAINER
3	J75-7501	DRAG DISK WASHER
4	M35-8901	ATD DRAG WASHER (1PC/PK)
5		
6		
7	B35-8702	BEARING RETAINER
8	G21-2503	SPOOL BALL BEARING
9	J56-3601	LINE STOPPER
10	J55-8001	LINE STOPPER
11	J31-4801	LINE STOPPER SPRING
12	M29-5801	SPOOL ASSY (2 12)
13	J54-6304	SPOOL METAL WASHER
14	J55-8201	SPOOL METAL SCREW
15	J54-9501	SPOOL METAL
16	G52-2705	SPOOL METAL BALL BEARING
17	J60-2201	SPOOL WASHER
18	H41-6101	CLICK LEAF SPRING
19	M02-1401	CLICK SPRING HOLDER
20	G47-1501	ROTOR NUT PLATE
21	J72-9101	ROTOR NUT PACKING
22	375-5202	ROTOR NUT BEARING WASHER
23	H95-9602	ROTOR NUT BALL BEARING
24	J69-0101	ROTOR NUT BEARING COLLAR
25	J30-5201	ROTOR NUT
26	J80-8501	ROTOR NUT COLLAR
27	372-7602	ROTOR NUT WASHER
28	H02-2701	ROTOR NUT SCREW
29	M21-7602	ROTOR
30	M21-7901	BAIL TRIP LEVER SPRING
31	M19-4601	BAIL TRIP LEVER WASHER
32	M21-8001	BAIL TRIP LEVER
33	M19-6401	BAIL TRIP LEVER COLLAR
34	H02-2702	BAIL TRIP LEVER SCREW
35	M19-4901	BAIL SPRING SHAFT
36	M19-5001	BAIL SPRING HOLDER COLLAR
37	J30-4801	BAIL SPRING
38	M21-8201	BAIL SPRING HOLDER
39	M19-5301	BAIL SPRING HOLDER SPRING
40	M19-5401	BAIL SPRING HOLDER PIN
41	M21-8401	BAIL SPRING COVER
42	G25-6401	BAIL SPRING COVER WASHER
43	M35-5601	BAIL SPRING COVER SCREW
44	M19-5901	BAIL ARM PLATE
45	M21-8301	BAIL ARM
46	M19-5801	BAIL ARM COLLAR
47	B33-9801	BAIL ARM RETAINER
48	M19-6801	ROLLER SCREW
49	M29-1901	ROLLER SCREW COLLAR
50	J53-8001	ROLLER COLLAR (A)
51	J53-8401	ROLLER MAG COLLAR (A)
52	J25-6702	ROLLER BALL BEARING
53	J25-6601	ROLLER COLLAR (B)
54	J25-6301	ROLLER COLLAR (C)
55	M19-6701	LINE ROLLER
56	M19-6601	ROLLER COLLAR (D)
57	J53-7801	ROLLER MAG COLLAR (B)
58	375-4101	ROLLER WASHER
59	M21-8501	BAIL ASSY
60	M19-6501	BAIL HOLDER PLATE
61	M19-5801	BAIL HOLDER COLLAR
62	B33-9801	BAIL HOLDER RETAINER
63	J55-4901	MAGSEALED COVER PACKING
64	J78-2101	MAGSEALED COVER SCREW
65	J77-4702	MAGSEALED COVER
66	H84-2808	MAGSEALED PLATE SCREW
67	J55-3803	MAGSEALED PLATE
68	H50-2203	MAGSEALED PLATE WASHER
69	H41-2602	ONEWAY CLUCH
70	J55-3701	ONEWAY CLUCH PACKING
71	J55-4801	CLUTCH RING
72	J53-6202	CLUTCH RING COLLAR

Key No	Part No	Description
73	J55-2203	PINION BEARING PLATE SCREW
74	J55-2101	PINION BEARING PLATE
75	G27-9602	PINION BALL BEARING (A)
76	G64-5603	PINION BEARING WASHER (A)01MM
77	375-8502	PINION BEARING WASHER (B)01MM
78	Z02-6835	PINION DRIVE GEAR SET
79	H81-4902	PINION BEARING SPRING WASHER
80	E09-6501	PINION BEARING WASHER (C)01MM
81	G46-6205	PINION BALL BEARING (B)
82	J58-8201	PINION BEARING COLLAR
83	M19-3307	BODY ASSY
84	J61-4001	MAIN SHAFT
85	G68-3301	OSCILLATING POST O RING
86	G71-2401	OSCILLATING POST WASHER
87	J60-8901	OSCILLATING POST
88	G31-5302	REAR COVER WASHER
89	M19-4001	REAR COVER PACKING
90	M19-4101	REAR COVER
91	J60-9107	BAIL TRIP COLLAR SCREW
92	J71-8502	BAIL TRIP COLLAR WASHER
93	J71-8601	BAIL TRIP COLLAR O RING
94	J55-3501	BAIL TRIP COLLAR
95	J55-3605	REAR COVER SCREW
96	G31-5301	REAR COVER SCREW WASHER
97	J55-4101	DRIVE BALL BEARING O RING
98	J04-6802	DRIVE BALL BEARING (A)
99	M19-3504	SET PLATE
100	J55-1301	SET PLATE O RING
101	J55-5501	DRIVE BEARING WASHER (A)
102	J55-2806	SIDE COVER (R)
103	G39-9702	HANDLE CAP O RING
104	M19-8101	HANDLE CAP
105	J55-1401	OSCILLATING GEAR WASHER
106	J55-1501	OSCILLATING GEAR
107	G86-9601	OSCILLATING GEAR O RING
108	H12-9201	OSCILLATING GEAR BEARING WASHER
109	G68-6904	OSCILLATING GEAR BALL BEARING
110	G94-0402	OSCILLATING GEAR SCREW
111	J73-1701	DRIVE GEAR O RING (A)
112	J55-2701	DRIVE GEAR COLLAR
113	J73-1701	DRIVE GEAR O RING (B)
114	J04-6802	DRIVE BALL BEARING (B)
115	G31-7505	DRIVE BEARING WASHER (B)003MM
116	J58-8901	SIDE COVER O RING (A)
117	J58-8801	SIDE COVER O RING (B)
118	M19-3901	SIDE COVER (L)
119	M29-6601	HANDLE ASSY

EXIGLT2500-XH Special Parts

Key No	Part No	Description
1	M19-7501	DRAG KNOB
3	J55-6601	DRAG MATA(LA)
4	M35-9001	ATD DRAG WASHER (3PCS/PK)
5	J56-1201	DRAG LIP WASHER
6	J55-6501	DRAG MATA(LB)
9	J55-8101	LINE STOPPER PLATE
12	M37-1401	SPOOL ASSY (2 12)
24	J69-0201	ROTOR NUT BEARING COLLAR
25	J25-3001	ROTOR NUT
27	371-2836	ROTOR NUT WASHER
29	M19-4202	ROTOR
30	M19-4501	BAIL TRIP LEVER SPRING
32	M19-4701	BAIL TRIP LEVER
37	M10-8801	BAIL SPRING
38	M19-5201	BAIL SPRING HOLDER
41	M19-6001	BAIL SPRING COVER
45	M19-5501	BAIL ARM
59	M19-6201	BAIL ASSY
78	Z02-6564	PINION DRIVE GEAR SET
84	J58-8001	MAIN SHAFT
99	M19-3503	SET PLATE
119	M19-7701	HANDLE ASSY