


FRSW3000D_5000D-C

SPINNING REEL

FRSW3000D_5000D-C

*Please order by parts number, not key number.

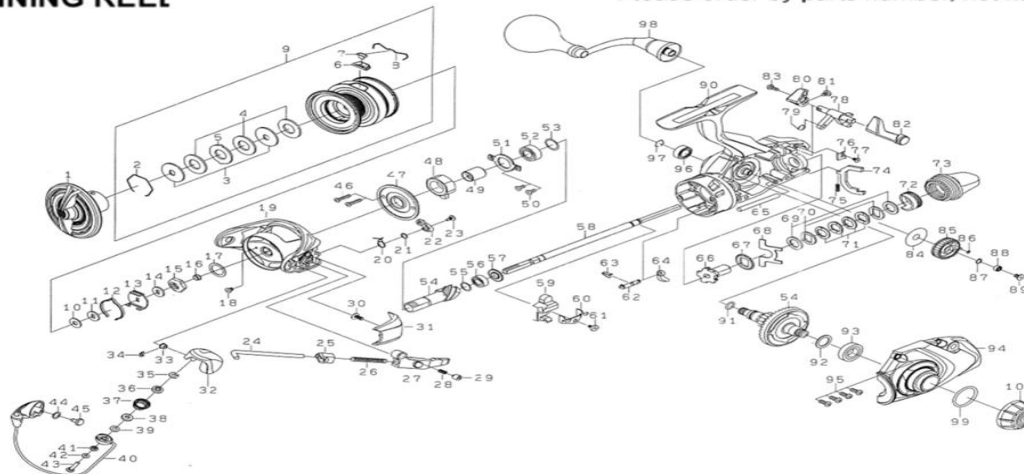

Key No	Part No	Description
1	Q60-1001	DRAG KNOB
2	Q34-6101	DRAG WASHER RETAINER
3	Q62-1901	KEY WASHER
4	Q91-7601	ATD DRAG WASHER (3PCS/PK)
5	Q34-6001	EARED WASHER
6	Q34-5601	LINE STOPPER PLATE
7	Q34-5501	LINE STOPPER
8	Q34-5701	LINE STOPPER SPRING
9	Q94-7101	SPOOL ASSY
10	E39-8003	SPOOL WASHER (A)
11	Q34-8502	SPOOL WASHER (B)
12	Q79-7701	CLICK LEAF SPRING
13	Q79-8201	CLICK SPRING HOLDER
14	Q34-4001	SPOOL WASHER (C)
15	Q90-6401	ROTOR NUT
16	Q85-8101	ROTOR NUT COLLAR
17	372-7602	ROTOR NUT WASHER
18	H02-2701	ROTOR NUT SCREW
19	Q81-6808	ROTOR
20	Q81-0801	BAIL TRIP LEVER SPRING
21	M19-4601	BAIL TRIP LEVER WASHER
22	Q81-6901	BAIL TRIP LEVER
23	Q95-7301	BAIL TRIP LEVER SCREW
24	Q81-0901	BAIL SPRING SHAFT
25	Q80-8501	BAIL SPRING COLLAR
26	Q81-1701	BAIL SPRING
27	Q80-8601	BAIL SPRING HOLDER
28	Q81-2001	BAIL CLICK SPRING
29	Q80-8701	BAIL CLICK PIN
30	Q81-2201	BAIL SPRING COVER SCREW
31	Q81-7101	BAIL SPRING COVER
32	Q80-8807	BAIL ARM
33	Q80-9101	BAIL ARM COLLAR
34	B33-9801	BAIL ARM RETAINER
35	Q81-0001	ROLLER COLLAR (A)
36	Q80-9901	ROLLER COLLAR (B)
37	Q80-9802	LINE ROLLAR
38	Q80-9901	ROLLER COLLAR (C)
39	Q81-0101	ROLLER WASHER
40	Q81-7201	BAIL
41	Q80-9701	ROLLER SCREW COLLAR
42	373-1306	ROLLER SCREW WASHER
43	Q81-0201	ROLLER SCREW
44	Q41-6203	BAIL HOLDER SCREW WASHER
45	Q81-2301	BAIL HOLDER SCREW
46	G83-7101	SHIELD COVER SCREW
47	Q13-9401	SHIELD COVER
48	J38-8401	ONEWAY CLUTCH
49	J00-1403	CLUTCH RING
50	Q12-6201	PINION BEARING PLATE SCREW
51	Q19-5601	PINION BEARING PLATE
52	G53-5104	PINION BALL BEARING
53	375-8502	PINION BEARING WASHER
54	Z70-0986	PINION DRIVE GEAR SET
55	H93-1701	PINION SPRING WASHER
56	G46-6202	PINION BALL BEARING (B)
57	J38-7701	PINION COLLAR
58	Q50-2602	MAIN SHAFT
59	Q50-2501	OSCILLATING SLIDER
60	Q50-2701	OSCILLATING SLIDER RETAINER
61	G78-6102	OSCILLATING SLIDER RETAINER SCREW
62	Q11-8101	ANTI REVERSE CAM
63	H69-7801	ANTI REVERSE CAM SPRING

Key No	Part No	Description
64	Q11-8001	ANTI REVERSE LEVER
65	Q11-9102	OSCILLATING POST
66	Q50-1701	TENSION METAL (A)
67	H04-6601	CLICK PLATE
68	Q50-1601	CLICK PLATE RETAINER
69	J16-6401	TENSION WASHER
70	Q59-7401	TENSION KEY WASHER
71	150-8902	TENSION SPRING WASHER
72	Q50-1501	TENSION METAL (B)
73	Q50-1401	TENSION KNOB
74	Q50-2201	CLUTCH PLATE
75	Q50-2301	CLUTCH PLATE SPRING
76	Q50-2401	CLICK PAWL
77	H63-8402	CLICK PAWL SCREW
78	Q50-1801	CLUTCH CAM
79	Q50-2101	CLUTCH CAM SPRING
80	Q50-1905	CLUTCH LEVER (A)
81	H06-6501	CLUTCH LEVER SCREW (A)
82	Q50-3405	CLUTCH LEVER (B)
83	Q50-3501	CLUTCH LEVER SCREW (B)
84	H59-5701	OSCILLATING GEAR WASHER
85	Q53-1401	OSCILLATING GEAR
86	H77-0601	OSCILLATING GEAR O RING
87	H12-9201	OSCILLATING GEAR BEARING WASHER
88	G46-9005	OSCILLATING GEAR BALL BEARING
89	Q12-6101	OSCILLATING GEAR SCREW
90	Q94-6601	BODY
91	G67-0501	DRIVE GEAR O RING
92	375-8502	DRIVE BEARING WASHER
93	G46-7302	DRIVE BALL BEARING (A)
94	Q94-7001	SIDE COVER
95	Q34-2601	SIDE COVER SCREW
96	G52-2706	DRIVE BALL BEARING (B)
97	G47-2401	DRIVE BEARING RETAINER
98	Q94-7401	HANDLE ASSEMBLY
99	G16-2401	HANDLE CAP O RING
100	Q34-5101	HANDLE CAP
200	B41-1703	HANDLE KNOB WASHER
201	G72-0001	HANDLE KNOB BUSHING
202	Q94-7501	HANDLE KNOB
203	G72-0001	HANDLE KNOB BUSHING
204	B67-9308	HANDLE KNOB SCREW
205	Q43-7701	HANDLE KNOB CAP

FRSW5000D-C Special Parts

Key No	Part No	Description
1	Q60-1101	DRAG KNOB
6	Q35-3501	LINE STOPPER PLATE
9	Q94-7701	SPOOL ASSY
19	Q94-7601	ROTOR
22	Q83-2801	BAIL TRIP LEVER
24	Q83-3001	BAIL SPRING SHAFT
26	Q83-3201	BAIL SPRING
27	Q83-3301	BAIL SPRING HOLDER
31	Q83-3701	BAIL SPRING COVER
32	Q83-3606	BAIL ARM
40	Q83-3801	BAIL
58	Q50-2603	MAIN SHAFT
59	Q53-1801	OSCILLATING SLIDER
85	Q35-0901	OSCILLATING GEAR
86	G46-6001	OSCILLATING GEAR O RING
98	Q94-8001	HANDLE ASSEMBLY