


PRXLT2000

SPINNING REEL

PRXLT2000

*Please order by parts number, not key number.

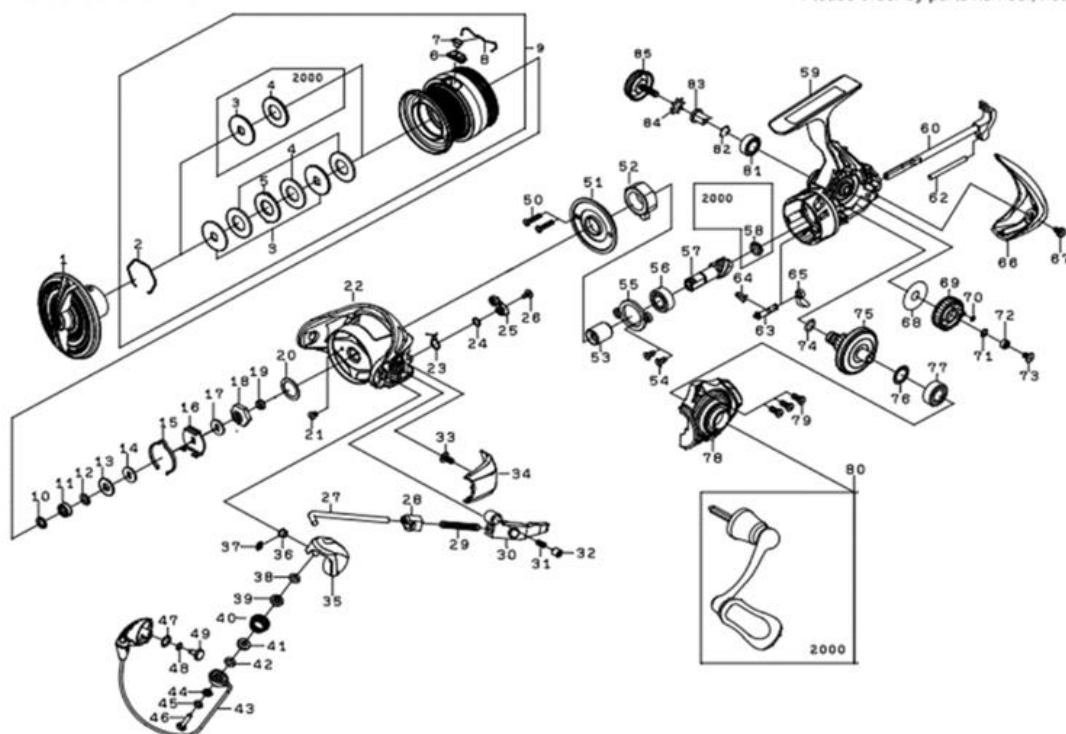

Key No	Part No	Description
1	Q37-6801	DRAG KNOB
2	Q34-6101	DRAG WASHER RETAINER
3	Q62-1901	KEY WASHER
4	Q91-7501	ATD DRAG WASHER (1PC/PK)
5	-----	-----
6	Q37-6701	LINE STOPPER PLATE
7	Q34-5501	LINE STOPPER
8	Q34-5701	LINE STOPPER SPRING
9	Q99-4901	SPOOL ASSY
10	Q38-2701	SPOOL BEARING WASHER (A)
11	E33-2501	SPOOL BALL BEARING
12	B41-1706	SPOOL BEARING WASHER (B)
13	E39-8003	SPOOL WASHER (B)
14	Q34-8502	SPOOL WASHER (A)
15	Q79-7701	CLICK LEAF SPRING
16	Q79-8201	CLICK SPRING HOLDER
17	Q34-4001	SPOOL WASHER (B)
18	Q90-6401	ROTOR NUT
19	Q85-8101	ROTOR NUT COLLAR
20	372-7602	ROTOR NUT WASHER
21	H02-2701	ROTOR NUT SCREW
22	Q82-5304	ROTOR
23	Q82-5401	BAIL TRIP LEVER SPRING
24	M19-4601	BAIL TRIP LEVER WASHER
25	Q82-5501	BAIL TRIP LEVER
26	Q95-7301	BAIL TRIP LEVER SCREW
27	Q81-0901	BAIL SPRING SHAFT
28	Q80-8501	BAIL SPRING COLLAR
29	Q87-3901	BAIL SPRING
30	Q82-6001	BAIL SPRING HOLDER
31	Q81-2001	BAIL CLICK SPRING
32	Q80-8701	BAIL CLICK PIN
33	Q81-2201	BAIL SPRING COVER SCREW
34	Q82-6401	BAIL SPRING COVER
35	Q82-6301	BAIL ARM
36	Q80-9101	BAIL ARM COLLAR
37	B33-9801	BAIL ARM RETAINER
38	Q81-0001	ROLLER COLLAR (A)
39	Q80-9901	ROLLER COLLAR (B)
40	Q80-9803	LINE ROLLER
41	Q80-9901	ROLLER COLLAR (C)
42	Q81-0101	ROLLER WASHER
43	Q82-6501	BAIL ASSY

Key No	Part No	Description
44	Q80-9701	ROLLER SCREW COLLAR
45	373-1306	ROLLER SCREW WASHER
46	M39-8901	ROLLER SCREW
47	Q41-6203	BAIL HOLDER WASHER
48	F03-7404	BAIL HOLDER SCREW WASHER
49	Q81-2301	BAIL HOLDER SCREW
50	G83-7101	SHIELD COVER SCREW
51	Q13-9401	SHIELD COVER
52	J38-8401	ONEWAY CLUCH
53	J00-1403	CLUTCH RING
54	Q12-6201	PINION BEARING PLATE SCREW
55	Q19-5601	PINION BEARING PLATE
56	G46-7302	PINION BALL BEARING
57	Q90-5701	PINION GEAR
58	Q41-9201	PINION COLLAR
59	Q99-4801	BODY ASSY
60	Q37-5301	MAIN SHAFT
61	-----	-----
62	Q11-9104	OSCILLATING POST
63	Q11-8101	ANTI REVERSE CAM
64	H69-7801	ANTI REVERSE CAM SPRING
65	Q11-8001	ANTI REVERSE LEVER
66	Q82-5201	REAR COVER
67	G27-0801	REAR COVER SCREW
68	H60-7902	OSCILLATING GEAR WASHER
69	Q37-5201	OSCILLATING GEAR
70	H77-0601	OSCILLATING GEAR O RING
71	H12-9201	OSCILLATING GEAR BEARING WASHER
72	G46-9005	OSCILLATING GEAR BALL BEARING
73	Q12-6101	OSCILLATING GEAR SCREW
74	G67-0501	DRIVE GEAR O RING
75	Q37-5901	DRIVE GEAR
76	375-8502	DRIVE WASHER
77	G46-7302	DRIVE BALL BEARING (A)
78	Q82-5101	SIDE COVER
79	G11-5001	SIDE COVER SCREW
80	R01-4501	HANDLE ASSY
81	G52-2706	DRIVE BALL BEARING (B)
82	G47-2401	DRIVE BEARING RETAINER
83	F72-1001	HANDLE SCREW COLLAR
84	160-8401	HANDLE SCREW WASHER
85	Q13-2401	HANDLE SCREW