


DAIWA

SPINNING REEL

SOLMQLT2500D-XH_3000D-H

*Please order by parts number, not key number.

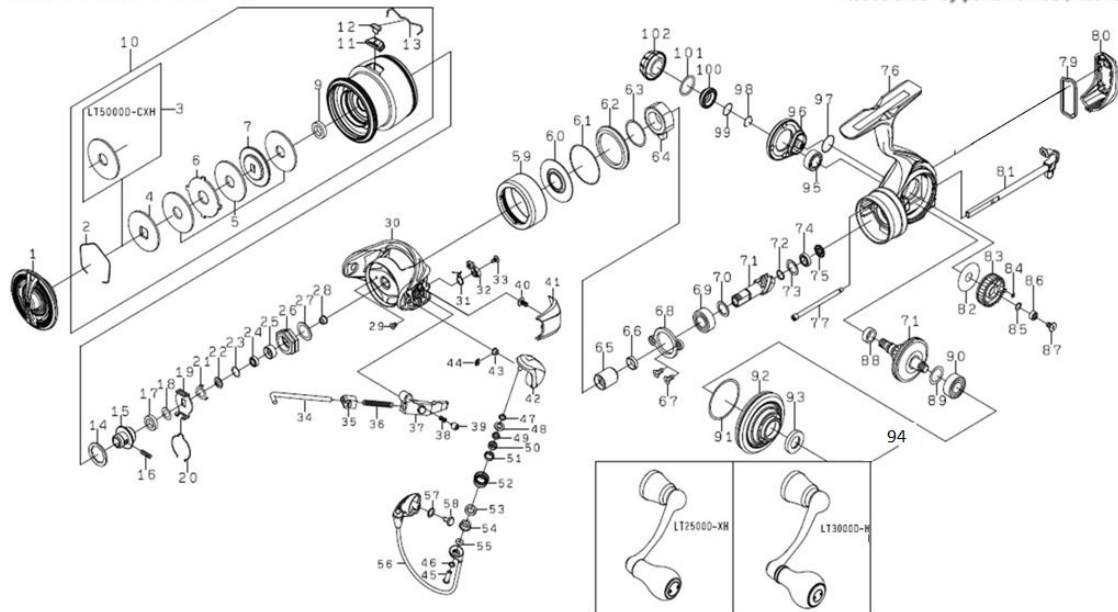

Key No	Part No	Description
1	J54-7201	DRAG KNOB
2	J54-7101	DRAG RING
4	J54-7001	DRAG DISC WASHER
5	J67-8801	DRAG WASHER
6	J54-6902	EARED WASHER
7	J54-9001	DRAG DISC WASHER (C)
9	J54-6701	DRAG COLLAR
10	M66-5801	SPOOL 24 SOL MQ LT2500D-XH
11	J55-8101	LINE STOPPER PLATE
12	J55-8001	LINE STOPPER
13	J31-4801	LINE STOPPER SPRING
14	J54-6301	SPOOL WASHER
15	J54-9501	SPOOL METAL
16	J55-8201	SPOOL METAL SCREW
17	H62-4801	SPOOL METAL COLLAR
18	J60-2201	CLICK HOLDER WASHER
19	M02-1401	CLICK HOLDER
20	H41-6101	CLICK LEAF SPRING
21	G47-1501	ROTOR NUT PLATE
22	J72-9101	ROTOR NUT PACKING
23	375-5202	ROTOR NUT BEARING WASHER
24	G46-6205	ROTOR NUT B.BEARING
25	M10-1801	ROTOR NUT BEARING COLLAR
26	J25-3001	ROTOR NUT
27	371-2824	ROTOR NUT WASHER(0.1)
28	Q85-8101	ROTOR NUT COLLAR
29	H02-2701	ROTOR NUT SCREW
30	M39-6702	ROTOR
31	M19-4502	BAIL TRIP LEVER SPRING
32	M39-6801	BAIL TRIP LEVER
33	H02-2702	BAIL TRIP LEVER SCREW
34	M51-8601	BAIL SPRING SHAFT
35	M39-7001	BAIL SPRING COLLAR
36	M10-8801	BAIL SPRING
37	M39-7101	BAIL SPRING HOLDER
38	M19-5301	BAIL SPRING HOLDER SPRING
39	M39-7201	BAIL SPRING HOLDER PIN
40	M35-5602	BAIL SPRING COVER SCREW
41	M39-7701	BAIL SPRING COVER
42	M47-4801	ARM LEVER
43	M39-7601	ARM LEVER COLLAR
44	B33-9801	ARM LEVER RETAINER
45	M47-5402	ROLLER SCREW
46	375-4105	ROLLER SCREW WASHER
47	F88-9105	ROLLER WASHER(A)
48	J73-6201	ROLLER PACKING
49	J53-0401	ROLLER COLLAR(A)
50	J25-6702	ROLLER BALL BEARING
51	J53-0501	ROLLER COLLAR(B)
52	M19-6702	LINE ROLLER
53	M54-4301	ROLLER COLLAR (C)
54	M54-4201	ROLLER COLLAR (D)
55	375-4101	ROLLER WASHER(B)
56	M47-5001	BAIL ASSEMBLY
57	M39-8201	BAIL HOLDER WASHER
58	M39-8301	BAIL HOLDER SCREW
59	M66-7901	MAGSEALED CAP
60	J77-7601	MAGSEALED PLATE
61	J79-1001	MAGSEALED PLATE O RING
62	J77-7802	MAGSEALED PLATE COLLAR
63	J63-9902	ONEWAY CLUTCH WASHER
64	J38-8401	ONEWAY CLUTCH ASSY

Key No	Part No	Description
65	J53-6102	CLUTCH RING
66	J53-6202	CLUTCH RING COLLAR
67	G99-7301	PINION BEARING PLATE SCREW
68	M09-4001	PINION BEARING PLATE
69	G27-9604	PINION BALL BEARING (A)
70	375-8502	PINION BEARING WASHER (A)
71	Z02-7825	PINION DRIVE GEAR SET
72	H81-4902	PINION BEARING SP WASHER(B)
73	E09-6501	PINION BEARING WASHER (C)
74	G46-6202	PINION BALL BEARING (B)
75	J58-8201	PINION BEARING (B) COLLAR
76	M09-2511	BODY
77	M00-9501	REAR COVER SCREW
79	J77-7301	REAR COVER PACKING
80	M59-9401	REAR COVER
81	J77-6301	MAIN SHAFT
82	J55-1401	OSCILLATING GEAR WASHER
83	Z02-3644	OSCILLATING GEAR
84	G86-9601	OSCILLATING GEAR O RING
85	H12-9201	OSCILLATING BEARING WASHER
86	G68-6906	OSCILLATING BALL BEARING
87	G99-7001	OSCILLATING GEAR SCREW
88	J55-2701	DRIVE GEAR RING
89	E15-4803	DRIVE BEARING WASHER
90	G52-2706	DRIVE BALL BEARING (A)
91	J58-8801	BODY COVER(A)(L) O RING
92	M59-9306	BODY COVER(A)(L)
93	M45-7801	HANDLE PACKING
94	M66-7601	HANDLE ASSY
95	G52-2706	DRIVE BALL BEARING (B)
96	J77-6001	SET PLATE
97	H81-6401	SET PLATE O RING
98	G47-2401	DRIVE BEARING(B) RING
99	H25-5001	DRIVE BEARING(B) O RING
100	J77-7009	BODY COVER(B)(R)
101	G39-9702	HANDLE CAP O RING
102	J77-8101	HANDLE CAP
103	F03-7403	REAR COVER SCREW WASHER(0.5)

SOLMQLT3000D-H Special Parts

Key No	Part No	Description
9	J54-6701	DRAG COLLAR
29	H02-2701	ROTOR NUT SCREW
31	M19-4502	BAIL TRIP LEVER SPRING
40	M35-5602	BAIL SPRING COVER SCREW
55	375-4101	ROLLER WASHER (B)
70	375-8502	PINION BEARING WASHER (A)
73	E09-6501	PINION BEARING WASHER (C)
74	G53-8007	PINION BALL BEARING (A)
75	J55-2001	PINION BEARING (B) COLLAR
76	M09-2712	BODY
79	J77-7301	REAR COVER PACKING
80	M61-8501	REAR COVER
82	J55-1401	OSCILLATING GEAR WASHER
88	J55-2701	DRIVE GEAR RING
89	375-8502	DRIVE BEARING WASHER
90	G46-7302	DRIVE BALL BEARING (A)
91	J55-3001	BODY COVER(A)(L) O RING
93	M45-7801	HANDLE PACKING
94	M66-7701	HANDLE ASSY
102	J77-8101	HANDLE CAP