


SPINNING REEL

SOLMQLT1000_2000D-XH

*Please order by parts number, not key number.

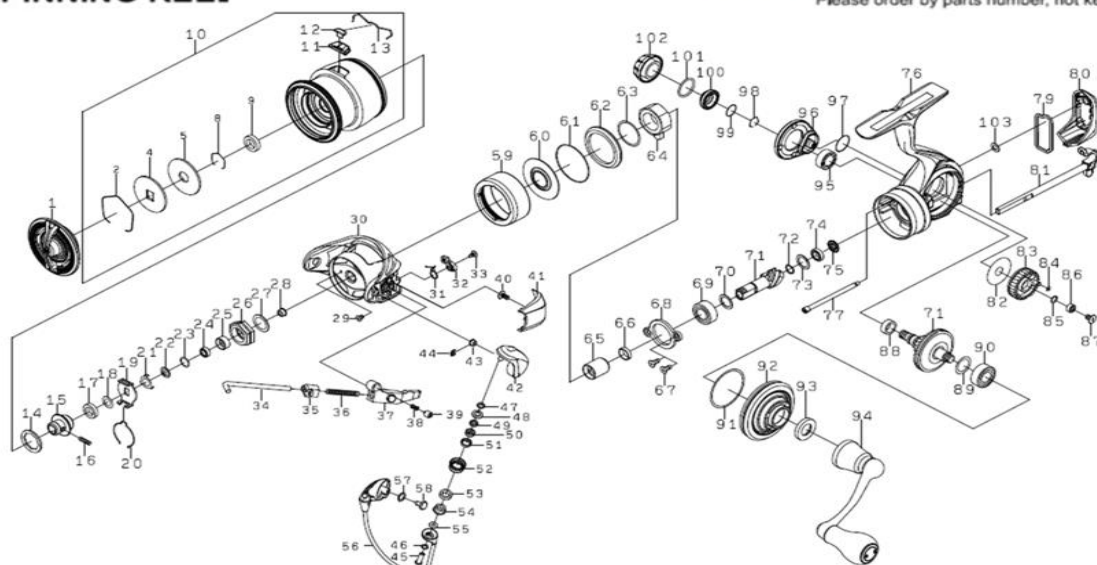

Key No	Part No	Description
1	J56-0501	DRAG KNOB
2	J54-7101	DRAG RING
4	J54-7001	DRAG DISC WASHER
5	J67-8801	DRAG WASHER
8	B35-8702	BEARING RETAINER
9	J54-6701	DRAG COLLAR
10	M66-6201	SPOOL24 SOL MQ LT1000DXH
11	J56-3601	LINE STOPPER PLATE
12	J55-8001	LINE STOPPER
13	J31-4801	LINE STOPPER SPRING
14	J54-6301	SPOOL WASHER
15	J56-4101	SPOOL METAL
16	J55-8201	SPOOL METAL SCREW
17	H62-4801	SPOOL METAL COLLAR
18	J60-2201	CLICK HOLDER WASHER
19	M02-1401	CLICK HOLDER
20	H41-6101	CLICK LEAF SPRING
21	G47-1501	ROTOR NUT PLATE
22	J72-9101	ROTOR NUT PACKING
23	375-5202	ROTOR NUT BEARING WASHER
24	H95-9602	ROTOR NUT B.BEARING(NC 5X8X2)
25	M72-1701	ROTOR NUT BEARING COLLAR
26	M72-1601	ROTOR NUT
27	371-2824	ROTOR NUT WASHER(0.1)
28	Q85-8101	ROTOR NUT COLLAR
29	H02-2701	ROTOR NUT SCREW
30	M41-2504	ROTOR
31	M21-7902	BAIL TRIP LEVER SPRING
32	M41-2801	BAIL TRIP LEVER
33	H02-2702	BAIL TRIP LEVER SCREW
34	M51-8601	BAIL SPRING SHAFT
35	M39-7001	BAIL SPRING COLLAR
36	J30-4801	BAIL SPRING
37	M41-3201	BAIL SPRING HOLDER
38	M19-5301	BAIL SPRING HOLDER SPRING
39	M39-7201	BAIL SPRING HOLDER PIN
40	M35-5602	BAIL SPRING COVER SCREW
41	M41-3401	BAIL SPRING COVER
42	M64-1504	ARM LEVER
43	M39-7601	ARM LEVER COLLAR
44	B33-9801	ARM LEVER RETAINER
45	M47-5402	ROLLER SCREW
46	375-4105	ROLLER SCREW WASHER
47	F88-9105	ROLLER WASHER(A)
48	J73-6201	ROLLER PACKING
49	J53-0401	ROLLER COLLAR(A)
50	J25-6702	ROLLARE BALL BEARING(NC 3X6X2)
51	J53-0501	ROLLER COLLAR(B)
52	M19-6702	LINE ROLLER
53	M54-4301	ROLLER COLLAR (C)
54	M54-4201	ROLLER COLLAR (D)
55	375-4101	ROLLER WASHER(B)
56	M64-1602	BAIL ASSEMBLY

Key No	Part No	Description
57	M39-8201	BAIL HOLDER WASHER
58	M39-8301	BAIL HOLDER SCREW
59	M66-7901	MAGSEALED CAP
60	J77-7601	MAGSEALED PLATE
61	J79-1001	MAGSEALED PLATE O RING
62	J77-7802	MAGSEALED PLATE COLLAR
63	J63-9902	ONEWAY CLUTCH WASHER
64	J38-8401	ONEWAY CLUTCH ASSY
65	J53-6102	CLUTCH RING ASSY
66	J53-6202	CLUTCH RING COLLAR
67	G99-7301	PINION BEARING PLATE SCREW
68	M09-4001	PINION BEARING PLATE
69	G27-9604	PINION BALL BEARING (A)
70	E09-6501	PINION BEARING WASHER (A)
71	Z02-7931	PINION DRIVE GEAR SET
72	H81-4902	PINION BEARING SP WASHER(B)
73	E09-6501	PINION BEARING WASHER (C)
74	G46-6202	PINION BALL BEARING(5X8X2.5)(B)
75	J58-8201	PINION BEARING (B) COLLAR
76	M09-2511	BODY
77	M00-9501	REAR COVER SCREW
79	J77-7301	REAR COVER PACKING
80	M59-9401	REAR COVER
81	J94-5802	MAIN SHAFT
82	J55-1401	OSCILLATING GEAR WASHER
83	J55-1501	OSCILLATING GEAR
84	G86-9601	OSCILLATING GEAR O RING
85	H12-9201	OSCILLATING BEARING WASHER
86	G68-6906	OSCILLATING BALL BEARING
87	G99-7001	OSCILLATING GEAR SCREW
88	J55-2701	DRIVE GEAR RING
89	E15-4803	DRIVE BALL BEARING WASHER
90	G52-2706	DRIVE BALL BEARING(7X11X3)(A)
91	J58-8801	BODY COVER(A)(L)O RING
92	M59-9306	BODY COVER(A)(L)
93	M45-7801	HANDLE PACKING
94	M66-7601	HANDLE ASSEMBLY
95	G52-2706	DRIVE BALL BEARING(7X11X3)(B)
96	J77-6001	SET PLATE
97	H81-6401	SET PLATE O RING
98	G47-2401	DRIVE BEARING(B) RING
99	H25-5001	DRIVE BEARING(B) O RING
100	J77-7009	BODY COVER(B)(R)
101	G39-9702	HANDLE CAP O RING
102	J77-8101	HANDLE CAP
103	F03-7403	REAR COVER SCREW WASHER

SOLMQLT2000D-XH Special Parts

Key No	Part No	Description
10	M66-6301	SPOOL24 SOL MQ LT2000DXH
70	375-8502	PINION BEARING WASHER (A)
83	Z02-3644	OSCILLATING GEAR