


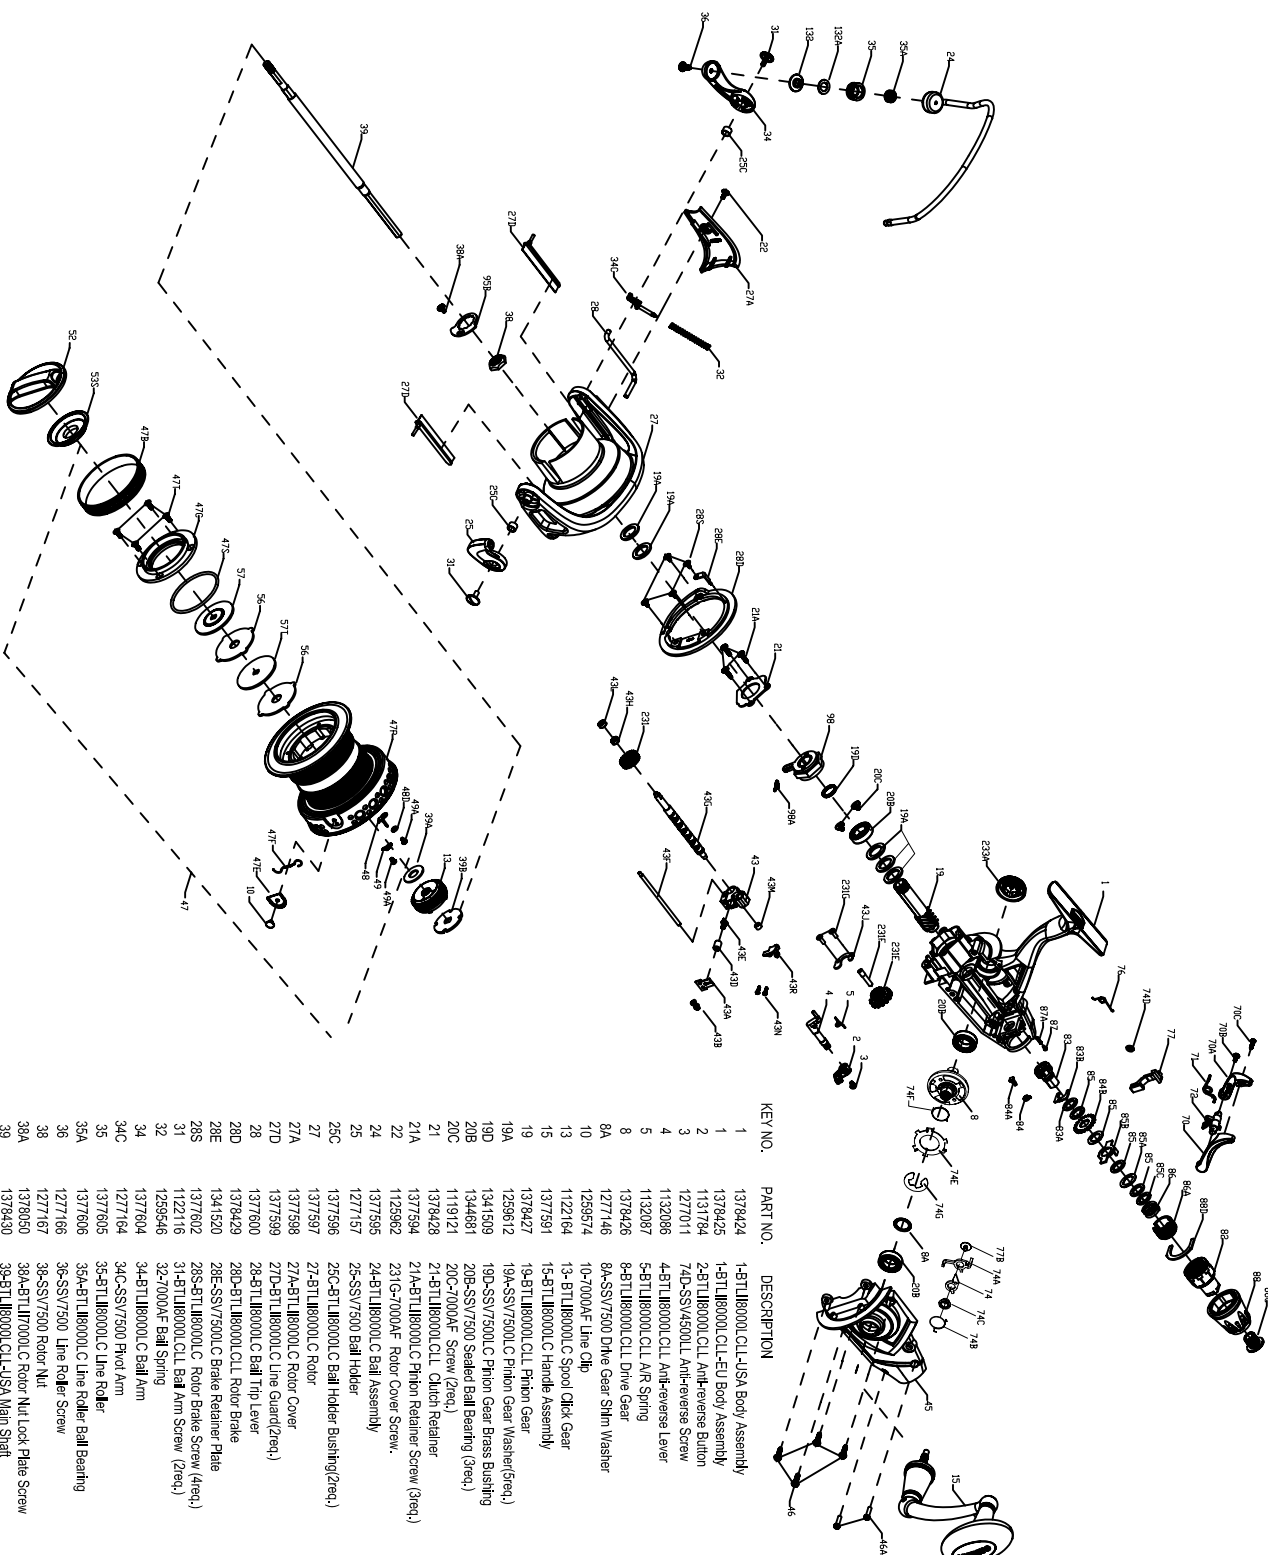

PARTS LIST FOR MODEL BTLI18000LCLL-USA/BTLI18000LCLL-EU



BTLI18000LCLL-USA/BTLI18000LCLL-EU Rev.01 1-5-15

KEY NO.	PART NO.	DESCRIPTION
43	1347207	43-BTLI18000LCLL Worm OS Silder
43A	1347173	43A-BTLI18000LCLL Silder Retainer Plate
43B	1277054	28S-SS/7500 OS Silder Retainer Screw (2req.)
43D	1132097	43D-BTLI18000LCLL Guide Claw Bushing
43E	1122192	43E-7000AF Guide Claw
43F	1378432	43F-BTLI18000LCLL Guide Shaft
43G	1378433	43G-BTLI18000LCLL Worm Shaft
43H	1377609	43H-BTLI18000LCLL Worm Shaft Ball Bearing
43I	1347204	43I-BTLI18000LCLL Top Retainer Plate
43L	1341533	43L-SS/7500L Worm Shaft Bushing
43M	1347170	43M-BTLI18000LCLL Worm Shaft Rear Bushing
43N	1347174	43N-BTLI18000LCLL W/Shaft Retainer Plate Screw(2req.)
43R	1347175	43R-BTLI18000LCLL Worm Shaft Retainer Plate
45	1378434	45-BTLI18000LCLL-USA Body Cover Assembly
46	1378435	46-BTLI18000LCLL-EU Body Cover Assembly
46A	1378111	46A-BTLI18000LCLL Body Cover Screw(2req.)
46B	1378436	46B-BTLI18000LCLL Spool Assembly
47	1378438	47-BTLI18000LCLL Spool Band
47B	1341538	47B-SS/7500L-C-USA Spool Band
47C	1377615	47C-BTLI18000LCLL Drag Cover
47E	1378437	47E-BTLI18000LCLL Line Clip Bushing
47F	1293575	47F-7000AF Line Clip Spring
47P	1378438	47P-BTLI18000LCLL Spool
47S	1377618	47S-BTLI18000LCLL Drag Cover Seal
47T	1377619	47T-BTLI18000LCLL Drag Cover Screw(4req.)
48	1295577	48-7000AF Spool Click Plate
48D	1341546	48D-SS/7500L Spool Clicker Spacer Ring
49	1295579	49-7000AF Spool Click Spring
49A	1341547	49A-SS/7500L Spool Clicker Spring Screw(2req.)
52	1377620	52-BTLI18000L-C-USA Drag Knob Assembly
52	1377621	52-BTLI18000L-C-EU Drag Knob Assembly
53S	1377622	53S-BTLI18000LCLL Drag Knob Seal
56	1377623	56-BTLI18000LCLL Drag Pinion Washer(2req.)
57	1122159	57-AF8000LCLL Top Keyed Drag Washer
57T	1122162	57T-AF8000LCLL Keyed Drag Washer
70	1378439	70-BTLI18000LCLL R-Drag Switch Lever-L
70A	1378440	70A-BTLI18000LCLL R-Drag Switch Lever-R
70B	1171351	70B-BTLI18000LCLL R-Drag Switch Lever Screw
70C	1277128	70B-SS/7500LCLL R-Drag Switch Lever Spring
71	1378117	71-BTLI18000LCLL Live Liner Lever Spring
72	1347181	72-BTLI18000LCLL Rear Drag Switch Cam
74	1347180	74-BTLI18000LCLL Live Liner Trib Level(A)
74A	1378442	74A-BTLI18000LCLL Rear Trib Level-B
74B	1347179	74B-BTLI18000LCLL Live Liner Trib Level Spring
74C	1131794	74C-BTLI18000LCLL Live Liner Trib Level Bushing
74D	1171946	74D-BTLI18000LCLL Stop Claw Spring Washer
74E	1277230	74E-SS/7500LCLL Live Liner Three Pawl Lever
74F	1277231	74F-SS/7500LCLL Live Liner Three Pawl Lever Spring
74G	1277232	74G-SS/7500LCLL Live Liner Three Pawl Lever E-clip
76	1378119	76-BTLI18000LCLL Live Liner Claw Spring
77	1378443	77-BTLI18000LCLL Live Liner Stop Claw
82	1378444	82-BTLI18000LCLL Live Liner Trib Level Screw
83	1378445	83-BTLI18000LCLL Rear Drag Housing
83A	1347186	83A-BTLI18000LCLL Rear Drag Ratchet Washer
83B	1131822	83B-BTLI18000LCLL Rear Drag Ratchet
83C	1347183	83C-BTLI18000LCLL Rear Drag Clicker Shaft
84	1347184	84A-BTLI18000LCLL Rear Drag Clicker
84A	1380083	84A-BTLI18000LCLL Rear Drag Clicker Gear
85	1131823	85-BTLI18000LCLL Rear Drag Clicker Gear
85A	1131825	85A-BTLI18000LCLL Rear Drag Keyed Washer
85B	1131827	85B-BTLI18000LCLL Rear Drag Keyed Washer
85C	1131827	85C-BTLI18000LCLL Rear Drag Washer
86	1131828	86-BTLI18000LCLL Rear Drag Spring
86A	1347187	86A-BTLI18000LCLL Rear Drag Bushing
87	1347249	87-BTLI18000LCLL Rear Drag Knob Pin
87A	1347248	87A-BTLI18000LCLL Rear Drag Knob Clicker Spring
88	1378447	88-BTLI18000LCLL Rear Drag Knob
88C	1378447	88C-BTLI18000LCLL Rear Drag Knob Screw
88D	1127105	88D-BTLI18000LCLL Rear Drag Knob Retainer
95B	1277189	95B-SS/7500 Rotor Nut Locking Plate
98	1378448	98-BTLI18000LCLL O/W Clutch Assembly
98A	1378449	98A-BTLI18000LCLL O/W Clutch Assembly Spring
132	1277192	132-SS/7500 Line Roller Collar
132A	1277097	132A-SS/5500 Line Roller Washer
231	1347205	231-BTLI18000LCLL OS Gear
231E	1378450	231E-BTLI18000LCLL Slow OS Gear
231F	1347163	231F-BTLI18000LCLL Slow OS Gear Pin
231G	1347162	231G-BTLI18000LCLL OS Gear Pin Screw(2req.)
233A	1377626	233A-BTLI18000LCLL Handle Cap