




MODEL 220GTO-CS

PARTS LIST FOR MODEL 220GTO-CS

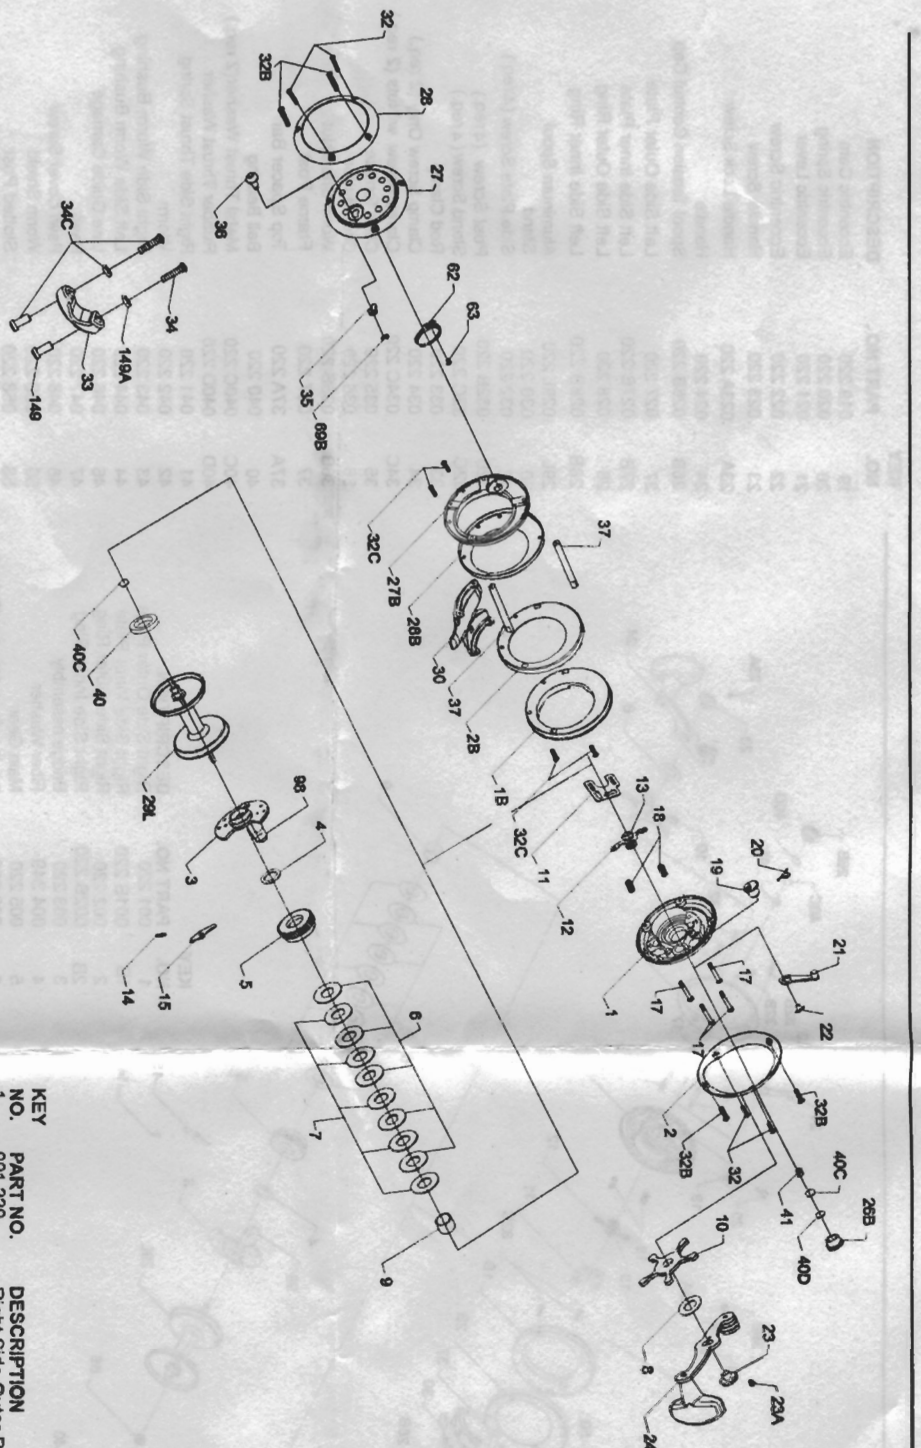

KEY NO.	PART NO.	DESCRIPTION
1	001 220	Right Side Outer Plate
1B	001B 220CS	Right Side Inner Plate
2	002 220	Right Side Outer Ring
2B	002B 220CS	Right Side Inner Ring
3	003 220	Bridge assembly
4	004 349	Fiber Washer
5	005 220	Main Gear
6	006 320	Friction Drag Washer(5 req.)
7	007C 220	Metal Drag Washer(Set of 5.)
8	008 220	Tension spring
9	009 220	Spacing Sleeve

KEY NO.	PART NO.	DESCRIPTION
10	010 220	Star Drag
11	011 220	Eccentric Jack
12	012 220	Pinion Yoke
13	013 220	Pinion Gear
14	014 220	Dog Spring
15	015 220	Dog
17	017 220	Bridge Screw (4 req.)
18	018 220	Clutch Spring (2 req.)
19	019 220	Eccentric Cam
20	020 220	Eccentric Spring
21	021 220	Eccentric Lever
22	022 220	Eccentric Screw
23	023 220	Handle Screw
23A	023A 220	Handle Lock Screw
24	024 220	Handle
26B	026B 220	Spool Tension Control Cap
27	027 220CS	Left Side Outer Plate
27B	027B 220CS	Left Side Inner Plate
28	028 220CS	Left Side Outer Ring
28B	028B 220CS	Left Side Inner Ring
29L	029L 220	Aluminum Spool
30	030 220	Side Plate Screw (4 req.)
32	032 220	Post Screw (4 req.)
32B	032B 220	Stand Screw (4 req.)
32C	032C 220	Rod Clamp
33	033 220	Clamp Screw Only (2 req.)
34	034 220	Clamp Screw w/Nuts (2 req.)
34C	034C 220	Click Tongue
35	035 220	Click Button
36	036 220	Frame Post (2 req.)
37	037 220	Ball Bearing
40	040 220	Metal Thrust Washer(2 req.)
40C	040C 220	Rubber Thrust Washer
40D	040D 220	Right Side Thrust Spring
41	041 220	Click Spring
62	062 220	Click Spring Screw
63	063 220	Retaining Ring (Click Button)
69B	069B 220	Gear Sleeve
98	098 220	Clamp Nut Only (2 req.)
149	149 220	Hex Nut Only (2 req.)
149A	149A 220	