


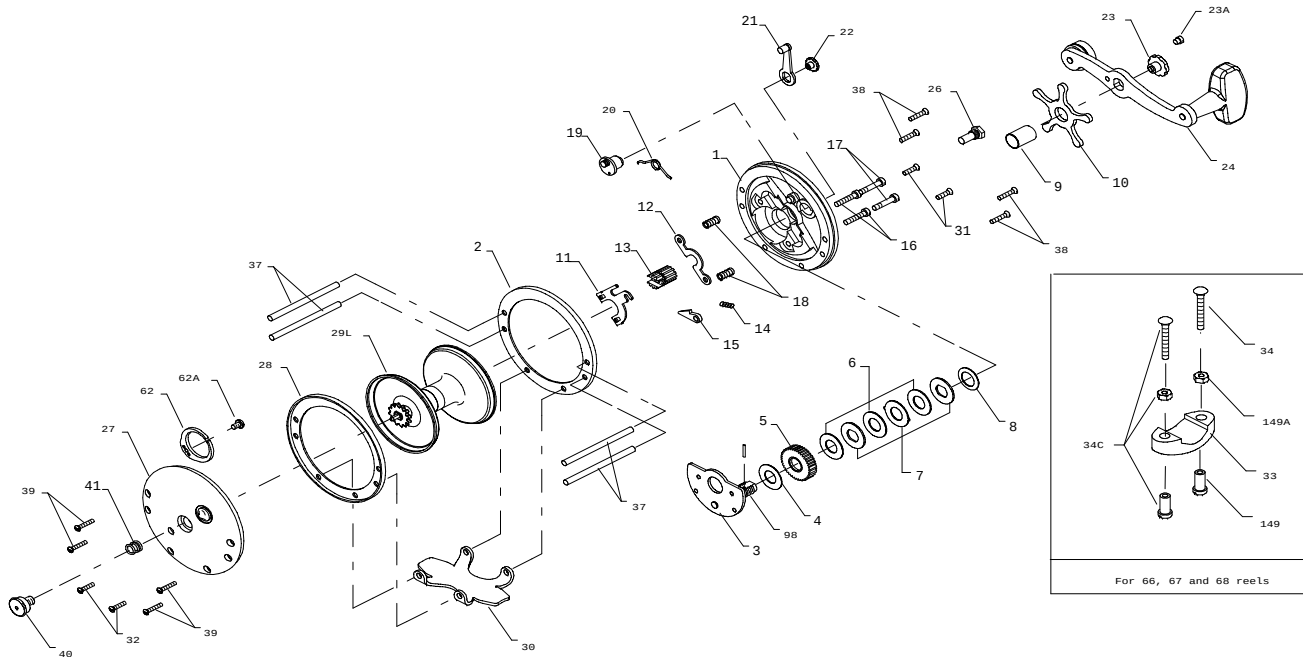

PARTS LIST FOR MODELS 60, 65, 66, 67 AND 68



KEY NO.	DESCRIPTION	PART NO.
1	Right Side Plate (60-65)	001 060
	Right Side Plate (66)	*001 066
	Right Side Plate (67)	*001 067
	Right Side Plate (68)	*001 068
2	Right Side Plate (60-65)	002 060
	Right Side Plate (66-67-68)	*002 066
3	Bridge w/Sleeve	003 066
4	Fiber Washer	004 060
5	Main Gear (60-65)	005 060
	Main Gear (66-67-68)	*005 066

KEY NO.	DESCRIPTION	PART NO.
6	Drag Washer (3 req.)	006 060
	Drag Washer (3 req.)	*006 113
7	Metal Washer Set	007C060
8	Tension Spring	008 060
9	Spacing Sleeve (60-67)	009 060
	Spacing Sleeve (66-67-68)	*009 066
10	Star Drag Wheel (60-65)	010 060
	Star Drag Wheel (66-67-68)	*010 066
11	Eccentric Jack (60-66)	*011 060
	Eccentric Jack (66-67-68)	011 066
12	Pinion Yoke	012 060
13	Pinion (60-65)	013 060
	Pinion (66-67-68)	*013 049

KEY NO.	DESCRIPTION	PART NO.
14	Dog Spring	014 099
15	Dog	015 099
16	Lower Bridge Screw	016 060
17	Upper Bridge Screw	017 060
18	Clutch Spring	018 060
19	Eccentric	019 060
20	Eccentric Spring	020 060
21	Eccentric Lever (60-65)	021 285
	Eccentric Lever (66-67-68)	*021 066
22	Eccentric Screw	022 060
23	Handle Screw	023 060
23A	Handle Lock Screw	110 060
24	Handle	024 066
26	Right Side Bearing	026 060
27	Left Side Plate Assembly	027 060
	Left Side Plate Assembly	*027 065
	Left Side Plate (66-67-68)	*027 066
28	Left Side Ring	028 060
	Left Side Ring (66-67-68)	*02 066
29M	Spool	029M060
	Spool	*029M065
	Spool	*029M066
	Spool	*029M067
	Spool	*029M068
30	Stand	030 060
	Stand	*030 065
	Stand	*030 066
	Stand (67)	*030 200
	Stand	*030 066
31	R.S. Stand Screw (60-65)	039 004
	R.S. Stand Screw (66-67-68)	038 008
32	L.S. Stand Screw (60-65)	039 004
	L.S. Stand Screw (66-67-68)	032 016
33	Rod Clamp (66-67-68)	*033 113
	Ringed Rod Clamp (66-67-68) (Optional)	*033R200
34	Clamp Screw Only (66-67-68)	*034 045
34C	Rod Clamp Screw w/Nuts	034C045
37	Frame Post (60)	037 060
	Frame Post (65-66)	*037 066
	Frame Post (67)	*037 113
	Frame Post (68)	*037 113HLW
38	Right Side Post Screw (60-65)	039 005
	Right Side Post Screw (66-67-68)	039 006
39	Left Side Post Screw	039 005
40	Left Side Bearing	040 060
41	Left Side Bearing Spring	041 060
62	Click Spring	062 309
62A	Click Spring Screw	063 209
98	Gear Sleeve	098 060
149	Clamp Nut (66-67-68)	*149 045
149A	Hex Nut (66-67-68)	*149 200