


PARTS LIST FOR RVL 30LW

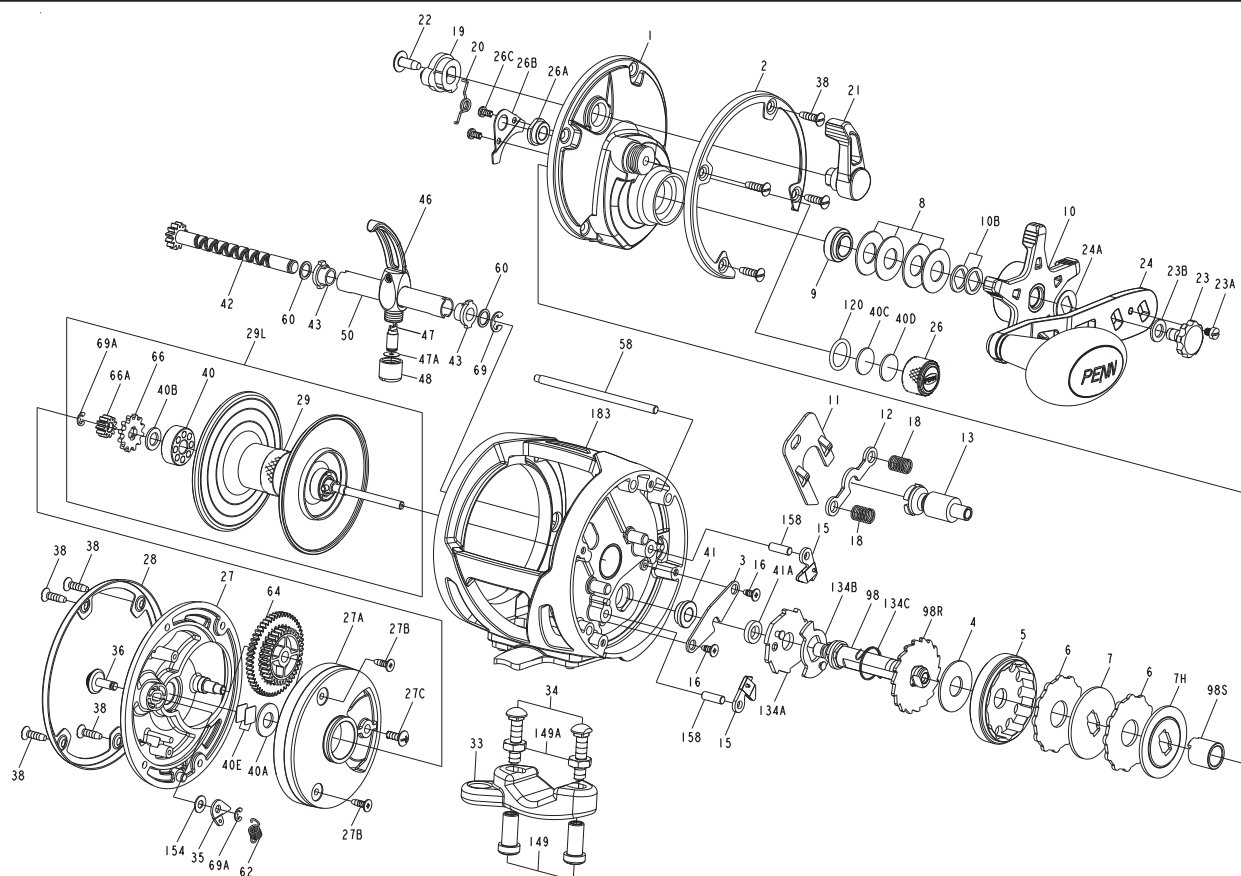

KEY NO.	PART NO.	PENN STYLE NO.	DESCRIPTION	KEY NO.	PART NO.	PENN STYLE NO.	DESCRIPTION
1	1405714	1-RVL30LW	Right Side Plate Assembly	34	1182788	34-045	Screw (2 req)
2	1405715	2-RVL30LW	Right Side Ring	35	1383037	35-WAR15LW	Click Tongue
3	1384179	3-WAR15LW	Bridge	36	1383038	36-WAR15LW	Click Button
4	1382976	4-WAR15LW	Drag Washer	38	1383039	38-WAR15LW	Screw (8 req)
5	1383103	5-WAR30LW	Main Gear	40	1383042	40-WAR15LW	Ball Bearing
6	1382978	6-WAR15LW	Tabbed Drag Washer(2 req)	40A	1383043	40A-WAR15LW	Washer
7	1382999	7-WAR15LW	Keyed Metal Drag Washer	40B	1383044	40B-WAR15LW	Felt Washer
7H	1383000	7H-WAR15LW	Heavy Metal Drag Washer	40C	1383045	40C-WAR15LW	Washer, Acetal Thrust
8	1383001	8-WAR15LW	Spring Washer (4 req)	40D	1383046	40D-WAR15LW	Washer, Rubber Thrust
9	1384180	9-WAR15LW	Spacing Sleeve	40E	1383047	40E-WAR15LW	Thrust Washer (2req)
10	1405684	10-RVL15LW	Star Drag	41	1383048	41-WAR15LW	Bushing
10B	1383004	10B-WAR15LW	Star Click Washer (2 req)	41A	1384181	41A-WAR15LW	Bushing
11	1383104	11-WAR30LW	Eccentric Jack	42	1383318	42-WAR30LW	Worm Shaft Assembly
12	1383007	12-WAR15LW	Pinion Yoke	43	1383051	43-WAR15LW	Worm Shaft Bushing(2req)
13	1383105	13-WAR30LW	Pinion	46	1383288	46-WAR30LW	Line Guide Assembly
15	1383009	15-WAR15LW	Anti Reverse Dog(2 req)	47	1383053	47-WAR15LW	Line Guide Pawl
16	1383010	16-WAR15LW	Screw (2 req)	47A	1383054	47A-WAR15LW	Pawl Shim
18	1383011	18-WAR15LW	Pinion Yoke Spring (2 req)	48	1383055	48-WAR15LW	Line Guide Nut
19	1383012	19-WAR15LW	Eccentric	50	1383057	50-WAR20LW	Worm Shield
20	1383013	20-WAR15LW	Eccentric Spring	58	1383059	58-WAR20LW	Line Guide Post
21	1405716	21-RVL30LW	Eccentric Lever	60	1383060	60-WAR15LW	Worm Shaft Washer(2req)
22	1405707	22-RVL15LW	Eccentric Screw	62	1383061	62-WAR15LW	Spring
23	1383016	23-WAR15LW	Handle Assembly Screw	64	1383289	64-WAR30LW	Idler Gear
23A	1383017	23A-WAR15LW	Handle Lock Screw	66	1383290	66-WAR30LW	Click Ratchet
23B	1383018	23B-WAR15LW	Handle Screw Washer	66A	1383064	66A-WAR15LW	Spool Gear
24	1405687	24-RVL15LW	Handle Assembly	69	1383065	69-WAR15LW	Retainer Ring
24A	1383020	24A-WAR15LW	Handle Thrust Washer	69A	1383066	69A-WAR15LW	Retainer Ring (2 req)
26	1405688	26-RVL15LW	Spool Tension Control Cap	98	1383067	98-WAR15LW	Main Gear Shaft
26A	1383022	26A-WAR15LW	Bushing	98R	1383069	98R-WAR15LW	Anti Reverse Ratchet
26B	1383023	26B-WAR15LW	Clutch Retainer	98S	1383070	98S-WAR15LW	Clutch Sleeve
26C	1383024	26C-WAR15LW	Screw(2req)	120	1383071	120-WAR15LW	O-Ring
27	1405717	27-RVL30LW	Left Side Plate	134A	1383072	134A-WAR15LW	Clutch Recover Plate
27A	1383027	27A-WAR15LW	Bearing Housing	134B	1383073	134B-WAR15LW	Clutch Recover Support Plate
27B	1383028	27B-WAR15LW	Screw(2req)	134C	1383074	134C-WAR15LW	Clutch Recover Spring
27C	1383029	27C-WAR15LW	Screw	149	1184702	149-045	Rod Clamp Nut (2 req)
28	1405718	28-RVL30LW	Left Side Ring	149A	1184706	149-200	Hex Nut (2 req)
29	1405719	29-RVL30LW	Spool	154	1383077	154-WAR15LW	Click Button Washer
29L	1405720	29L-RVL30LW	Spool Assembly	158	1383078	158-WAR15LW	Dog Pin(2req)
33	1182754	33-113	Rod Clamp	183	1383107	183-WAR30LW	Frame Assembly