


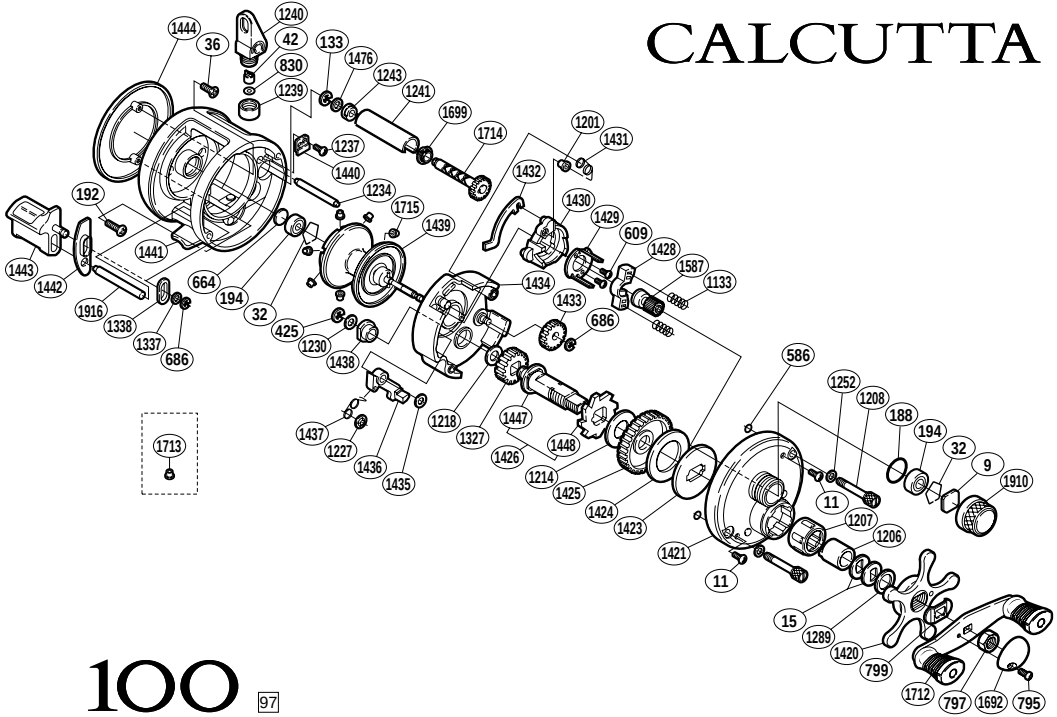

100 97

BNT No.	PARTS NAMES	BNT No.	PARTS NAMES	BNT No.	PARTS NAMES
0009	Cast Control Spacer	1227	Clutch Pawl Spring Retainer	1435	Clutch Pawl Spacer
0011	Right Side Plate Screw	1230	Drive Shaft Spacer	1436	Clutch Pawl
0015	Drag Spring Washer	1234	Level Wind Guide	1437	Clutch Pawl Spring
0032	Bearing Retainer	1237	Worm Bushing (A) Retainer Screw	1438	Drive Shaft Bushing
0036	Left Side Plate Screw	1239	Pawl Cap	1439	Spool Assembly
0042	Line Guide Pawl	1240	Line Guide	1440	Worm Bushing (A) Retainer
0133	Worm Shaft Retainer	1241	Level Wind Guard	1441	One-Piece Frame
0188	"O" Ring	1243	Worm Bushing (B)	1442	Clutch Bar Guide (B)
0192	Left Side Plate Screw	1252	Right Side Plate Bolt Washer	1443	Quick-Fire II Clutch Bar
0194	Ball Bearing	1289	Star Drag Spacer	1444	Left Side Plate
0425	"E" Lock	1327	Idle Gear	1447	Drive Shaft
0586	Bolt Retainer	1337	Clutch Bar Support Spacer	1448	Anti-Reverse Ratchet
0609	Clutch Cam Screw	1338	Clutch Bar Guide (A)	1476	Worm Shaft Spacer
0664	Spacer (B)	1420	Star Drag	1587	Pinion Gear
0686	Idle Gear (B) Retainer	1421	Right Side Plate	1692	Handle Nut Plate
0795	Handle Nut Plate Screw	1423	Key Washer	1699	Worm Bushing (A)
0797	Handle Nut	1424	Drag Washer (C)	1712	Handle Assembly
0799	Friction Washer	1425	Drive Gear	1714	Worm Shaft
0830	Spacer (optional)	1426	Drive Shaft	1715	Brake Collar (red)
1133	Yoke Spring	1428	Yoke	1910	Cast Control Cap
1201	Retractor Spring Collar	1429	Clutch Cam Retainer	1916	Clutch Bar Support
1206	Roller Clutch Inner Tube	1430	Clutch Cam		
1207	Roller Clutch Bearing	1431	Retractor Spring		
1208	Right Side Plate Bolt	1432	Clutch Plate		
1214	Drag Washer (A)	1433	Idle Gear (B)		
1218	Idle Gear (A) Spacer	1434	Set Plate	1713	Brake Collar (green)