


## CALCUTTA ⚙️A-RB

## CT-400B

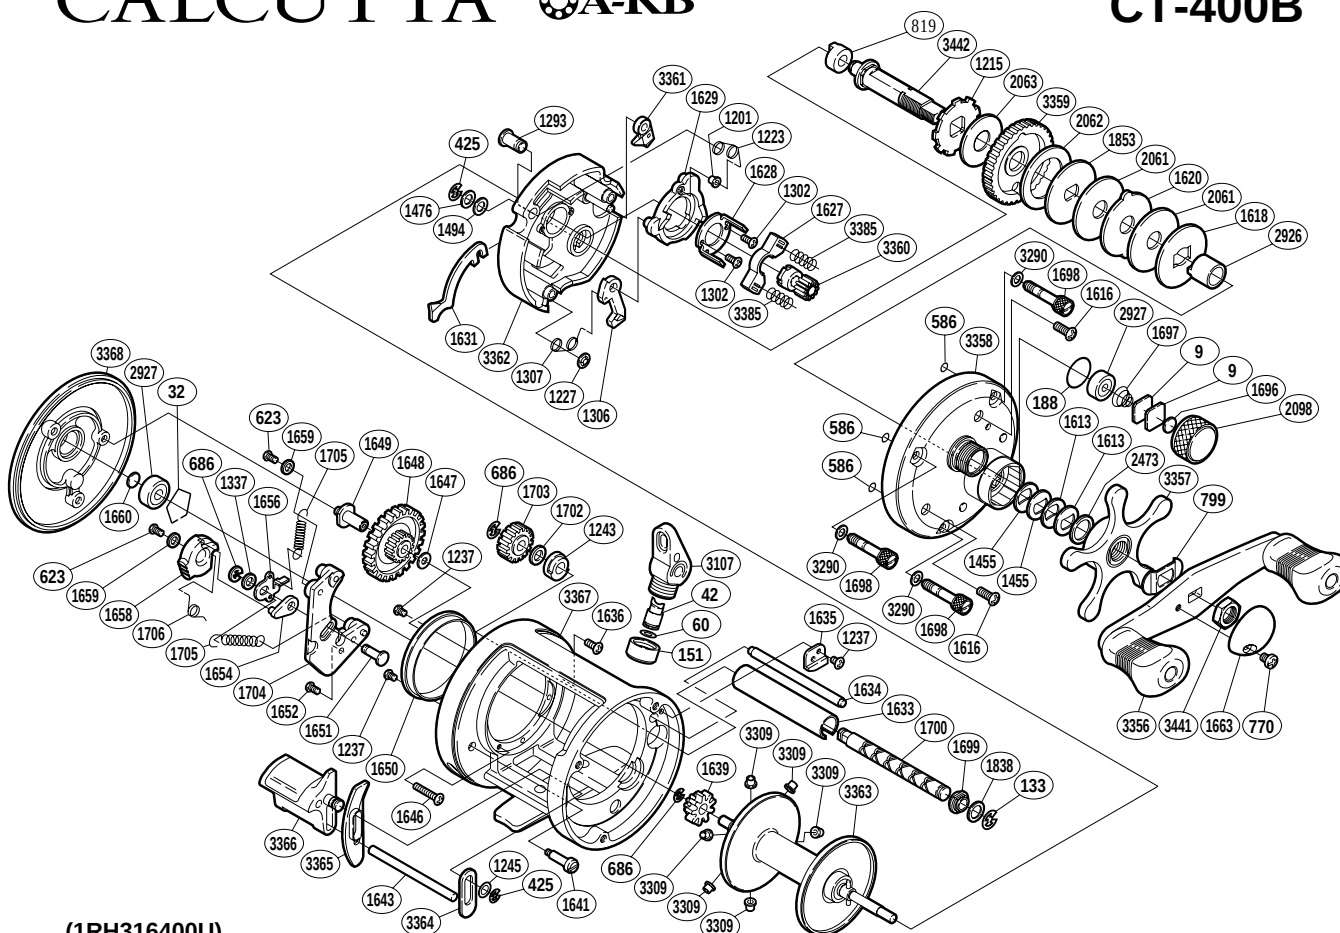

(1RH316400U)

| Part No. | Description             | Part No. | Description              | Part No. | Description              |
|----------|-------------------------|----------|--------------------------|----------|--------------------------|
| BNT0009  | Cast Control Spacer     | BNT1620  | Eared Washer             | BNT1704  | Click Plate              |
| BNT0032  | Bearing Retainer        | BNT1627  | Yoke                     | BNT1705  | Click Spring             |
| BNT0042  | Line Guide Pawl         | BNT1628  | Clutch Cam Retainer      | BNT1706  | Click Switch Spring      |
| BNT0060  | Spacer                  | BNT1629  | Clutch Cam               | BNT1838  | Washer                   |
| BNT0133  | E Lock                  | BNT1631  | Clutch Plate             | BNT1853  | Key Washer               |
| BNT0151  | Pawl Cap                | BNT1633  | Level Wind Guard         | BNT2061  | Drag Washer              |
| BNT0188  | O Ring                  | BNT1634  | Level Wind Guide         | BNT2062  | Drag Washer              |
| BNT0425  | E Lock                  | BNT1635  | Worm Bushing A Retainer  | BNT2063  | Drag Washer              |
| BNT0586  | O Ring                  | BNT1636  | Screw                    | BNT2098  | Cast Control Cap         |
| BNT0623  | Screw                   | BNT1639  | Idle Gear A / Click Gear | BNT2473  | Star Drag Spacer         |
| BNT0686  | E Lock                  | BNT1641  | Side Plate Bolt          | BNT2926  | Roller Clutch Inner Tube |
| BNT0770  | Screw                   | BNT1643  | Clutch Bar Support       | BNT2927  | Ball Bearing             |
| BNT0799  | Friction Washer         | BNT1646  | Screw                    | BNT3107  | Line Guide               |
| BNT0819  | Drive Shaft Bushing     | BNT1647  | Washer                   | BNT3290  | Washer                   |
| BNT1201  | Retractor Spring Collar | BNT1648  | Idle Gear B              | BNT3309  | Brake Collar             |
| BNT1215  | Anti-Reverse Ratchet    | BNT1649  | Idle Gear Shaft          | BNT3356  | Handle Assembly          |
| BNT1223  | Retractor Spring        | BNT1650  | Brake Ring               | BNT3357  | Star Drag                |
| BNT1227  | Push Nut (SPN-2)        | BNT1651  | Click Shaft              | BNT3358  | Right Side Plate         |
| BNT1237  | Screw                   | BNT1652  | Screw                    | BNT3359  | Drive Gear               |
| BNT1243  | Worm Bushing B          | BNT1654  | Click Link               | BNT3360  | Pinion Gear              |
| BNT1245  | Spacer                  | BNT1656  | Click Pawl               | BNT3361  | Anti-Reverse Pawl        |
| BNT1293  | Retractor Spring Pin    | BNT1658  | Click Switch             | BNT3362  | Set Plate                |
| BNT1302  | Screw                   | BNT1659  | Lock Washer              | BNT3363  | Spool Assembly           |
| BNT1306  | Clutch Pawl             | BNT1660  | Spacer B                 | BNT3364  | Clutch Bar Guide A       |
| BNT1307  | Clutch Pawl Spring      | BNT1663  | Handle Nut Plate         | BNT3365  | Clutch Bar Guide B       |
| BNT1337  | Spacer                  | BNT1696  | Cast Control Spacer B    | BNT3366  | Quick-Fire II Clutch Bar |
| BNT1455  | Drag Spring Washer H    | BNT1697  | Spool Tension Spring     | BNT3367  | One-Piece Frame          |
| BNT1476  | Spacer                  | BNT1698  | Side Plate Bolt          | BNT3368  | Left Side Plate          |
| BNT1494  | Washer                  | BNT1699  | Worm Bushing A           | BNT3385  | Yoke Spring              |
| BNT1613  | Drag Spring Washer L    | BNT1700  | Worm Shaft               | BNT3441  | Handle Nut               |
| BNT1616  | Screw                   | BNT1702  | Washer                   | BNT3442  | Drive Shaft              |
| BNT1618  | Key Washer              | BNT1703  | Idle Gear C              |          |                          |