


### *Calyx* **CYX 100A** 02

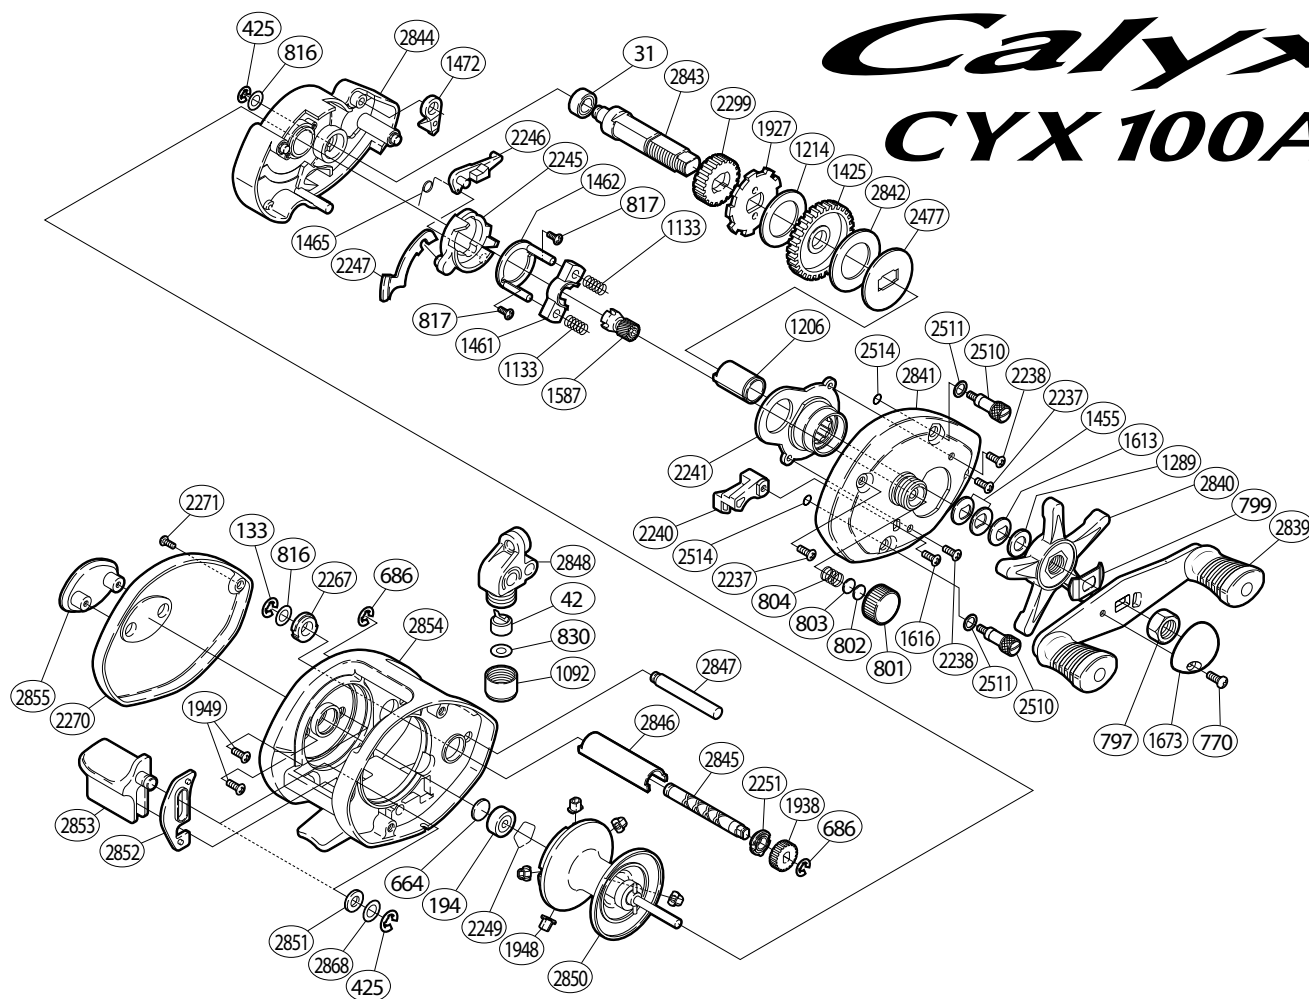

#### Part No. Description

|         |                           |
|---------|---------------------------|
| BNT0031 | Ball Bearing              |
| BNT0042 | Line Guide Pawl           |
| BNT0133 | Worm Shaft Retainer       |
| BNT0194 | Ball Bearing              |
| BNT0425 | "E" Lock                  |
| BNT0664 | Spacer (B)                |
| BNT0686 | "E" Lock                  |
| BNT0770 | Handle Nut Plate Screw    |
| BNT0797 | Handle Nut                |
| BNT0799 | Friction Washer           |
| BNT0801 | Cast Control Cap          |
| BNT0802 | Spool Tension Spacer (B)  |
| BNT0803 | Spool Tension Spacer (A)  |
| BNT0804 | Spool Tension Spring      |
| BNT0816 | Shaft Washer              |
| BNT0817 | Clutch Cam Retainer Screw |
| BNT0830 | Spacer (optional)         |
| BNT1092 | Pawl Cap                  |
| BNT1133 | Yoke Spring               |
| BNT1206 | Roller Clutch Inner Tube  |
| BNT1214 | Drag Washer (A)           |
| BNT1289 | Star Drag Spacer          |
| BNT1425 | Drive Gear                |
| BNT1455 | Drag Spring Washer        |

#### Part No. Description

|         |                        |
|---------|------------------------|
| BNT1461 | Yoke                   |
| BNT1462 | Clutch Cam Retainer    |
| BNT1465 | Clutch Pawl Spring     |
| BNT1472 | Anti-Reverse Pawl      |
| BNT1587 | Pinion Gear            |
| BNT1613 | Drag Spring Washer (L) |
| BNT1616 | Return Pin Guide Screw |
| BNT1673 | Handle Nut Plate       |
| BNT1927 | Anti-Reverse Ratchet   |
| BNT1938 | Idle Gear (C)          |
| BNT1948 | Brake Collar           |
| BNT1949 | I.D. Plate Screw       |
| BNT2237 | Right Side Plate Screw |
| BNT2238 | Bush Plate Screw       |
| BNT2240 | Return Pin Guide       |
| BNT2241 | Roller Clutch Assembly |
| BNT2245 | Clutch Cam             |
| BNT2246 | Clutch Pawl            |
| BNT2247 | Clutch Plate           |
| BNT2249 | Bearing Retainer       |
| BNT2251 | Worm Bushing (A)       |
| BNT2267 | Worm Bushing (B)       |
| BNT2270 | Left Side Plate        |
| BNT2271 | Left Side Plate Screw  |

#### Part No. Description

|         |                             |
|---------|-----------------------------|
| BNT2299 | Idle Gear (A)               |
| BNT2477 | Key Washer                  |
| BNT2510 | Right Side Plate Nut        |
| BNT2511 | Side Plate Nut Washer       |
| BNT2514 | "O" Ring                    |
| BNT2839 | Handle Assembly             |
| BNT2840 | Star Drag                   |
| BNT2841 | Right Side Plate            |
| BNT2842 | Drag Washer                 |
| BNT2843 | Drive Shaft                 |
| BNT2844 | Set Plate                   |
| BNT2845 | Worm Shaft                  |
| BNT2846 | Level Wind Guard            |
| BNT2847 | Stabilizer Bar              |
| BNT2848 | Line Guide                  |
| BNT2850 | Spool Assembly              |
| BNT2851 | Clutch Button Washer        |
| BNT2852 | Clutch Button Guide         |
| BNT2853 | Quick-Fire II Clutch Button |
| BNT2854 | One-Piece Frame             |
| BNT2855 | Left Side I.D. Plate        |
| BNT2868 | Clutch Bar Support Spacer   |