


Catala™

01

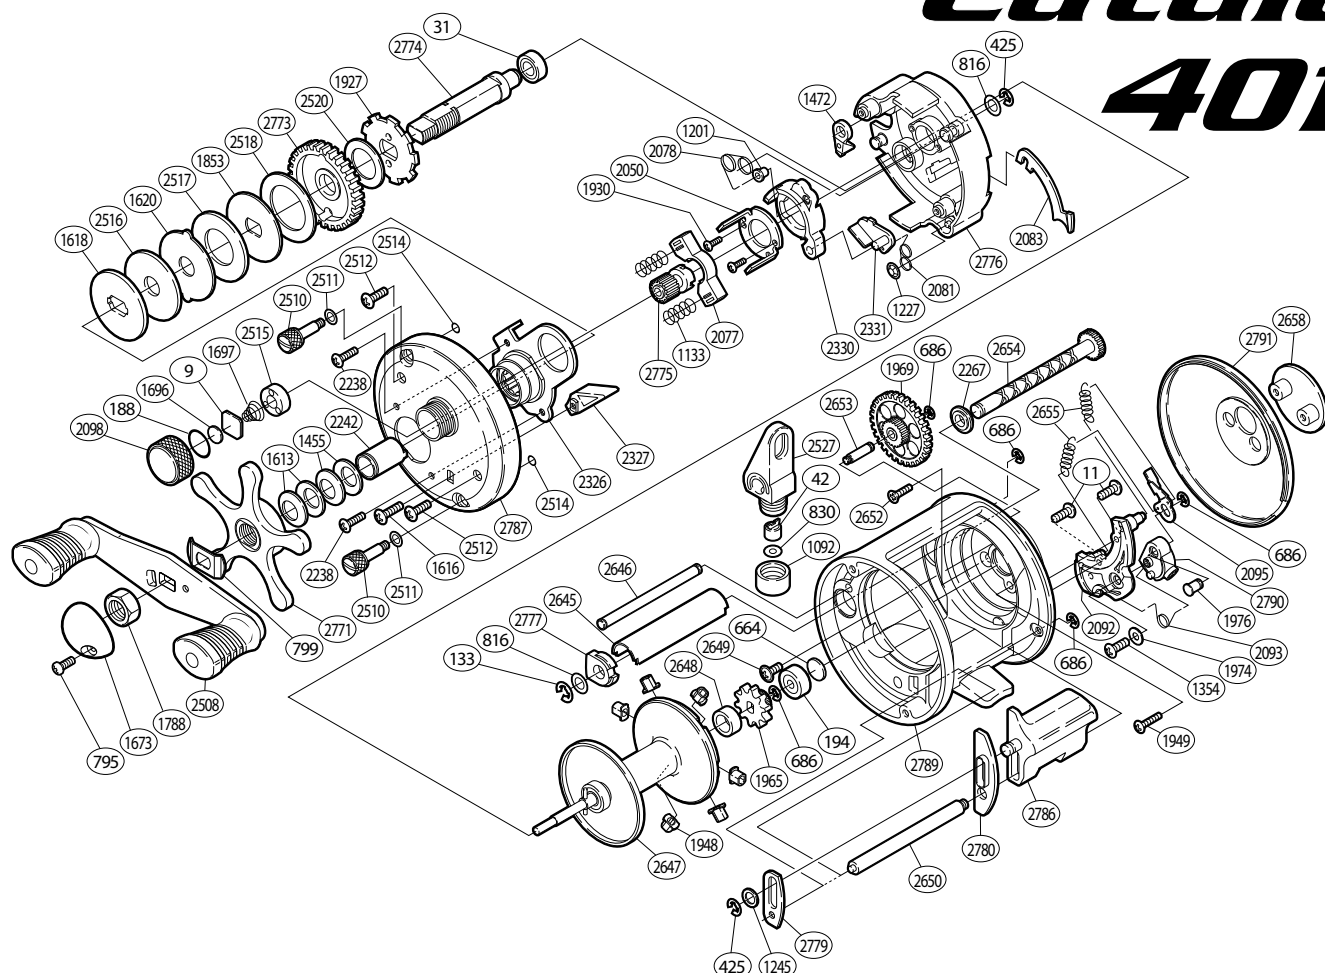

Part No. Description

BNT0009	Spacer (A)
BNT0011	Click Plate Screw
BNT0031	Ball Bearing
BNT0042	Line Guide Pawl
BNT0133	Worm Shaft Retainer
BNT0188	"O" Ring
BNT0194	Ball Bearing
BNT0425	"E" Lock
BNT0664	Spacer (B)
BNT0686	"E" Lock
BNT0795	Handle Nut Plate Screw
BNT0799	Friction Washer
BNT0816	Shaft Washer
BNT0830	Spacer (optional)
BNT1092	Pawl Cap
BNT1133	Yoke Spring
BNT1201	Retractor Spring Collar
BNT1227	Push Nut (SPN-2)
BNT1245	Clutch Bar Support Spacer
BNT1354	Click Switch Screw
BNT1455	Drag Spring Washer (H)
BNT1472	Anti-Reverse Pawl
BNT1613	Drag Spring Washer (L)
BNT1616	Return Pin Guide Screw
BNT1618	Key Washer (C)
BNT1620	Eared Washer
BNT1673	Handle Nut Plate
BNT1696	Cast Control Spacer (B)
BNT1697	Spool Tension Spring
BNT1788	Handle Nut

Part No. Description

BNT1853	Key Washer (A)
BNT1927	Anti-Reverse Ratchet
BNT1930	Clutch Cam Screw
BNT1948	Brake Collar
BNT1949	I.D. Plate Screw (long)
BNT1965	Idle Gear (A)
BNT1969	Idle Gear (B)
BNT1974	Click Switch Washer
BNT1976	Click Shaft
BNT2050	Clutch Cam Retainer
BNT2077	Yoke
BNT2078	Retractor Spring
BNT2081	Clutch Pawl Spring
BNT2083	Clutch Plate
BNT2092	Click Plate
BNT2093	Click Switch Spring
BNT2095	Click Pawl
BNT2098	Cast Control Cap
BNT2238	Bush Plate Screw
BNT2242	Roller Clutch Inner Tube
BNT2267	Worm Bushing (B)
BNT2326	Roller Clutch Assembly
BNT2327	Return Pin Guide
BNT2330	Clutch Cam
BNT2331	Clutch Pawl
BNT2508	Handle Assembly
BNT2510	Left Side Plate Nut
BNT2511	Side Plate Nut Washer
BNT2512	Left Side Plate Screw
BNT2514	"O" Ring

Part No. Description

BNT2515	Cast Control Bushing
BNT2516	Drag Washer (AG)
BNT2517	Drag Washer (CG)
BNT2518	Drag Washer (BG)
BNT2520	Drive Shaft Washer (B)
BNT2527	Line Guide
BNT2645	Level Wind Guard
BNT2646	Stabilizer Bar
BNT2647	Spool Assembly
BNT2648	Idle Gear (A) Bush
BNT2649	Bearing Screw
BNT2650	Clutch Button Support Bar
BNT2652	I.D. Plate Screw (short)
BNT2653	Idle Gear (B) Shaft
BNT2654	Worm Shaft
BNT2655	Click Spring
BNT2658	Right Side I.D. Plate
BNT2771	Star Drag
BNT2773	Drive Gear
BNT2774	Drive Shaft
BNT2775	Pinion Gear
BNT2776	Set Plate
BNT2777	Worm Bushing (A)
BNT2779	Clutch Button Guide (A)
BNT2780	Clutch Button Guide (B)
BNT2786	Quick-Fire II Clutch Bar
BNT2787	Left Side Plate
BNT2789	One-Piece Frame
BNT2790	Click Switch
BNT2791	Right Side Plate