


SHIMANO

CORE S A-RB

COR-50MG7

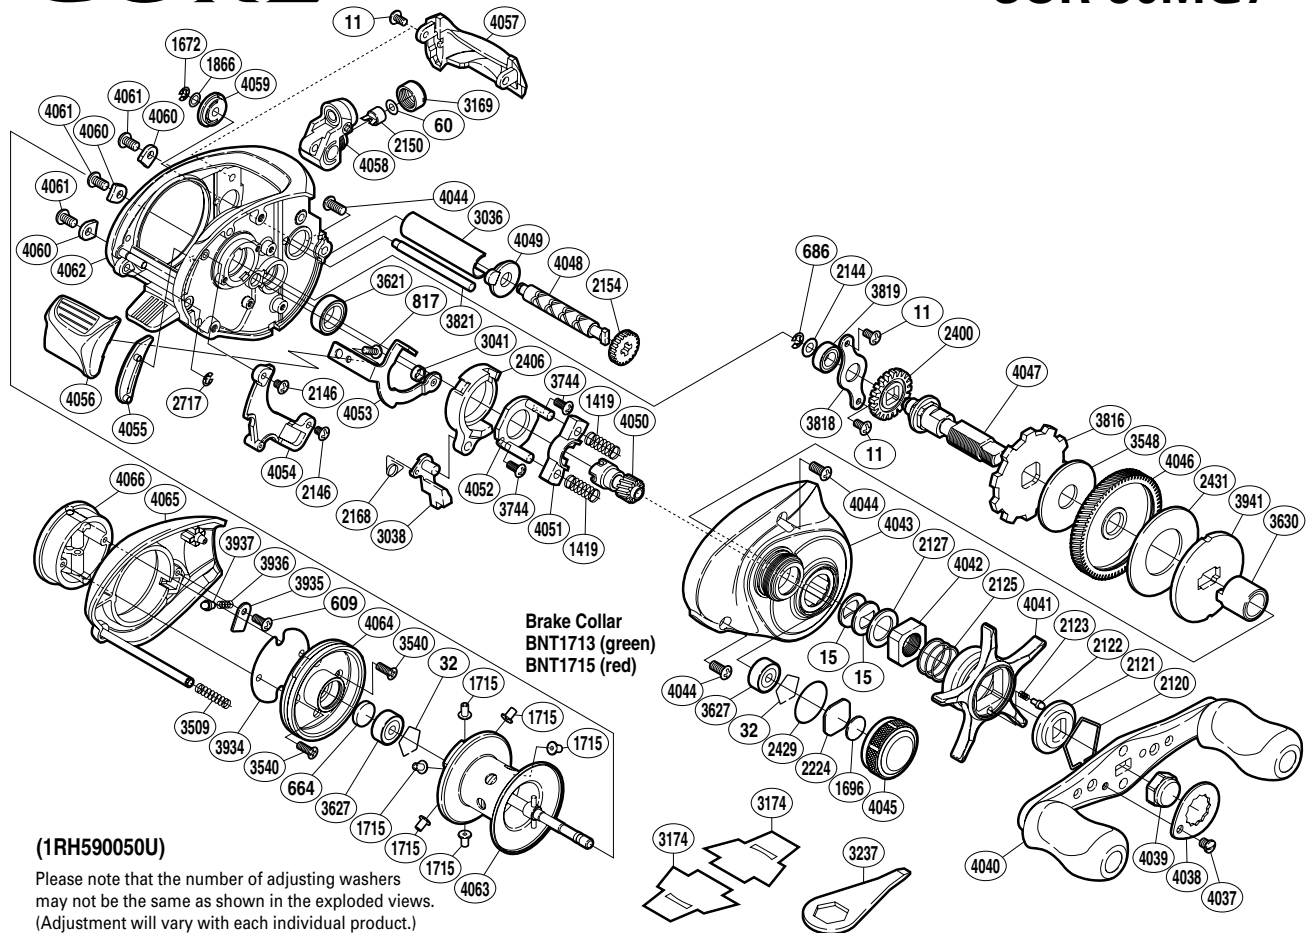

Part No.	Description	Part No.	Description	Part No.	Description
BNT0011	Screw	BNT2431	Drag Washer	BNT4043	Right Side Plate
BNT0015	Drag Spring Washer	BNT2717	E Lock	BNT4044	Screw
BNT0032	Bearing Retainer	BNT3036	Level Wind Guard	BNT4045	Cast Control Cap
BNT0060	Spacer	BNT3038	Clutch Pawl	BNT4046	Drive Gear
BNT0609	Screw	BNT3041	Clutch Plate Shaft Support	BNT4047	Drive Shaft
BNT0664	Spacer B	BNT3169	Pawl Cap	BNT4048	Worm Shaft
BNT0686	E Lock	BNT3509	Side Plate Spring	BNT4049	Worm Bushing A
BNT0817	Screw	BNT3540	Screw	BNT4050	Pinion Gear
BNT1419	Yoke Spring	BNT3548	Drag Washer	BNT4051	Yoke
BNT1672	E Lock	BNT3621	Ball Bearing	BNT4052	Clutch Cam Retainer
BNT1696	Cast Control Spacer	BNT3627	Ball Bearing	BNT4053	Clutch Plate
BNT1715	Brake Collar (red)	BNT3630	Roller Clutch Inner Tube	BNT4054	Clutch Guard
BNT1866	Spacer	BNT3744	Screw	BNT4055	Clutch Bar Guide B
BNT2120	Click Plate Retainer	BNT3816	Anti-Reverse Ratchet	BNT4056	Quick-Fire II Clutch Bar
BNT2121	Star Drag Click	BNT3818	Drive Shaft Retainer	BNT4057	Level Wind Protector
BNT2122	Click Pin	BNT3819	Ball Bearing	BNT4058	Line Guide
BNT2123	Click Spring	BNT3821	Level Wind Guide	BNT4059	Worm Bushing B
BNT2125	Star Drag Spring	BNT3934	Brake Case Spacer	BNT4060	Side Frame Plate
BNT2127	Star Drag Spacer	BNT3935	Brake Spring Retainer	BNT4061	Screw
BNT2144	Washer	BNT3936	Click Spring	BNT4062	One-Piece Frame
BNT2146	Screw	BNT3937	Click Pin	BNT4063	Spool Assembly
BNT2150	Line Guide Pawl	BNT3941	Key Washer	BNT4064	Brake Case
BNT2154	Idle Gear	BNT4037	Screw	BNT4065	Left Side Plate
BNT2168	Clutch Pawl Spring	BNT4038	Handle Retainer	BNT4066	Turnkey Dial
BNT2224	Spool Tension Spacer	BNT4039	Handle Nut		
BNT2400	Idle Gear	BNT4040	Handle Assembly	BNT1713	Brake Collar (green) (accessory)
BNT2406	Clutch Cam	BNT4041	Star Drag	BNT3174	Reel Seat Spacer (accessory)
BNT2429	O Ring	BNT4042	Star Drag Nut	BNT3237	Wrench (accessory)

(210311)