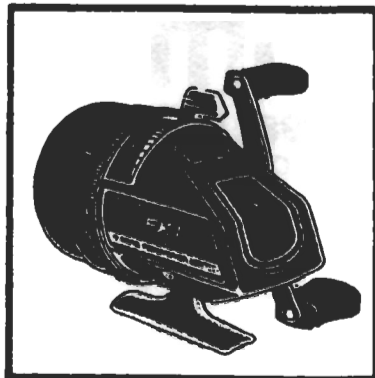
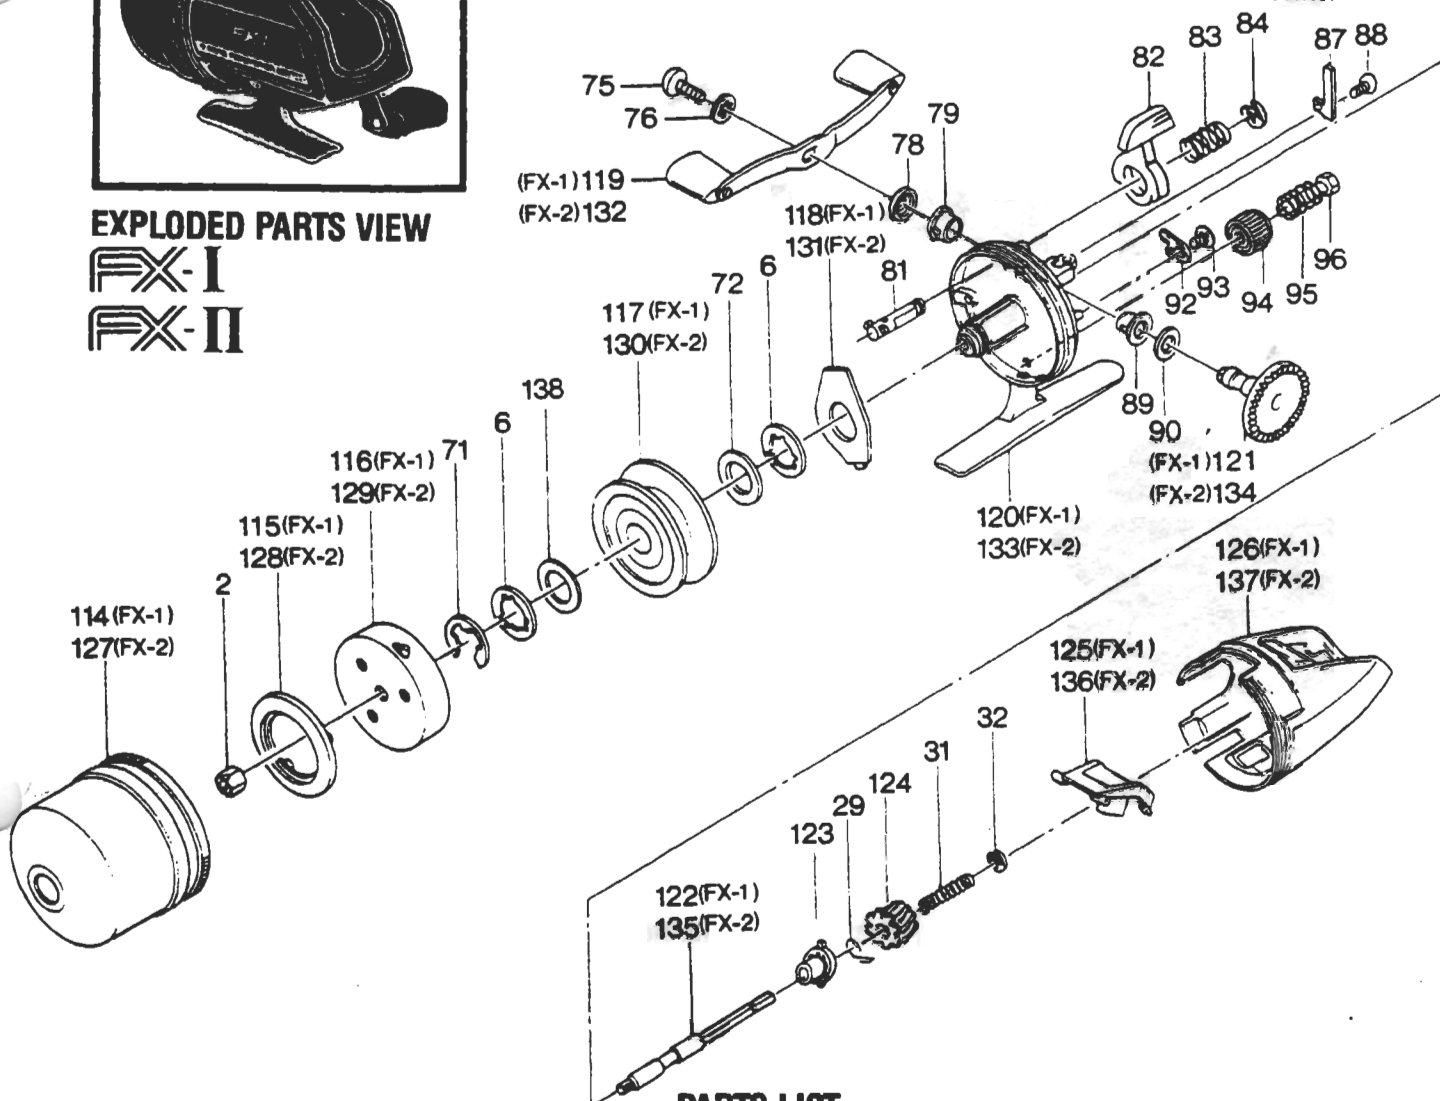


**EXPLODED PARTS VIEW**
FX-I
FX-II
**PARTS LIST**
PART # DESCRIPTION

SP 0002	Rotor Nut
SP 0006	Key Washer 1
SP 0029	Anti-Reverse Pawl Spring
SP 0031	Main Shaft Spring
SP 0032	Main Shaft Spring Retainer
SP 0071	Spool Retainer
SP 0072	Drag Washer 1
SP 0075	Handle Lock Screw
SP 0076	Handle Lock Washer
SP 0078	Drive Gear Shaft Cover
SP 0079	Drive Gear Bushing (A)
SP 0081	Drag Shaft
SP 0082	Drag Lever
SP 0083	Drag Spring
SP 0084	"E" Lock
SP 0087	Drag Lever Click Spring
SP 0088	Click Spring Screw

PART # DESCRIPTION

SP 0089	Drive Gear Bushing (B)
SP 0090	Drive Gear Washer
SP 0092	Anti-Reverse Pawl
SP 0093	Anti-Reverse Pawl Screw
SP 0094	Drag Dial
SP 0095	Drag Dial Spring
SP 0096	Drag Screw
SP 0114	Front Cover
SP 0115	Line Shubber
SP 0116	Rotor
SP 0117	Spool
SP 0118	Drag Plate
SP 0119	Handle Assembly
SP 0120	Body
SP 0121	Drive Gear
SP 0122	Main Shaft

PART # DESCRIPTION

SP 0123	Main Shaft Bushing
SP 0124	Pinion Gear
SP 0125	Push Button
SP 0126	Rear Housing
SP 0127	Front Cover
SP 0128	Line Shubber
SP 0129	Rotor
SP 0130	Spool
SP 0131	Drag Plate
SP 0132	Handle Assembly
SP 0133	Body
SP 0134	Drive Gear
SP 0135	Main Shaft
SP 0136	Push Button
SP 0137	Rear Housing
SP 0138	Drag Washer 2

Prices and specifications subject to change without notice.

OCTOBER, 1988

'89-47