


TRANX

TRX150XGA

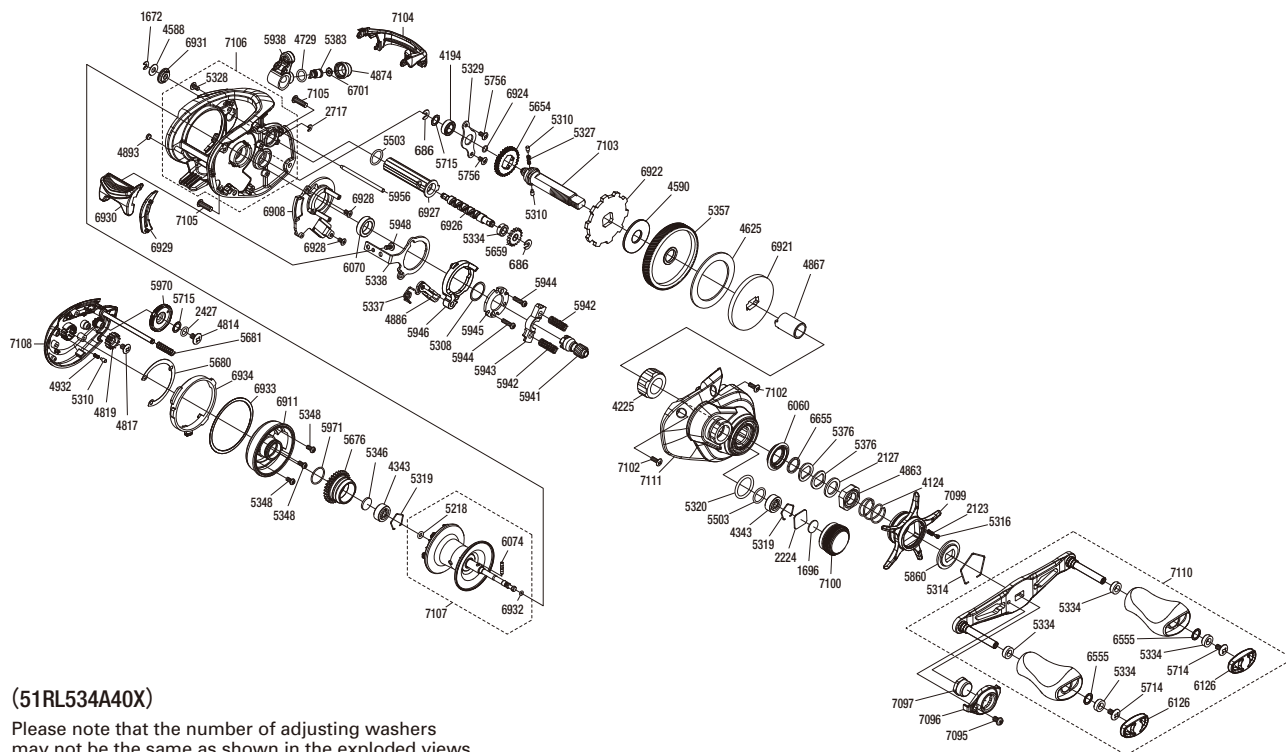

(51RL534A40X)

Please note that the number of adjusting washers may not be the same as shown in the exploded views. (Adjustment will vary with each individual product.)

Part No.	Description	Part No.	Description	Part No.	Description
BNT0686	E Lock	BNT5329	Drive Shaft Retainer	BNT6555	Washer
BNT1672	E Lock	BNT5334	Bushing	BNT6655	Washer
BNT1696	Cast Control Spacer B	BNT5337	Clutch Pawl Spring	BNT6701	Spacer
BNT2123	Click Spring	BNT5338	Clutch Plate	BNT6908	Clutch Guard Assembly
BNT2127	Star Drag Spacer	BNT5346	Bearing Spacer	BNT6911	Brake Case
BNT2224	Cast Control Spacer A	BNT5348	Screw	BNT6921	Key Washer
BNT2427	O Ring	BNT5357	Drive Gear	BNT6922	Anti-Reverse Ratchet
BNT2717	E Lock	BNT5376	Washer	BNT6924	O Ring
BNT4124	Star Drag Spring	BNT5383	Line Guide Pawl	BNT6926	Worm Shaft
BNT4194	Ball Bearing	BNT5503	O Ring	BNT6927	Level Wind Guard
BNT4225	Roller Clutch Bearing	BNT5654	Idle Gear A	BNT6928	Screw
BNT4343	Ball Bearing	BNT5659	Idle Gear C	BNT6929	Clutch Bar Guide B
BNT4588	Washer	BNT5676	Brake Ring Gear	BNT6930	Clutch Button
BNT4590	Drag Washer A	BNT5680	Washer	BNT6931	Level Wind Guard Bushing
BNT4625	Drag Washer C	BNT5681	Spring	BNT6932	O Ring
BNT4729	O Ring	BNT5714	Screw	BNT6933	Washer
BNT4814	Screw	BNT5715	Washer	BNT6934	Left Side Plate Cam Lever
BNT4817	Screw	BNT5756	Screw	BNT7095	Screw
BNT4819	Idle Gear	BNT5860	Star Drag Click Plate	BNT7096	Handle Nut Plate
BNT4863	Star Drag Nut	BNT5938	Line Guide Assembly	BNT7097	Handle Nut
BNT4867	Roller Clutch Inner Tube	BNT5941	Pinion Gear	BNT7099	Star Drag
BNT4874	Pawl Cap	BNT5942	Yoke Spring	BNT7100	Cast Control Cap
BNT4886	Clutch Pawl Assembly	BNT5943	Yoke	BNT7102	Screw
BNT4893	Washer	BNT5944	Screw	BNT7103	Drive Shaft
BNT4932	Click Spring	BNT5945	Clutch Cam Retainer	BNT7104	Level Wind Protector
BNT5218	O Ring	BNT5946	Clutch Cam	BNT7105	Screw
BNT5308	Washer	BNT5948	Screw	BNT7106	Frame Assembly
BNT5310	Idle Gear Pin	BNT5956	Stabilizer Bar	BNT7107	Spool Assembly
BNT5314	Click Plate Retainer	BNT5970	Brake Dial	BNT7108	Left Side Plate Assembly
BNT5316	Click Pin	BNT5971	O Ring	BNT7110	Handle Assembly
BNT5319	Bearing Retainer	BNT6060	Roller Clutch Water Proof	BNT7111	Right Side Plate
BNT5320	O Ring	BNT6070	Pinion Gear Bushing		
BNT5327	Idle Gear Spring	BNT6074	Spool Clutch Pin		
BNT5328	Screw	BNT6126	Handle Knob Seal	BNT4692	B-100 Oil (Accessory)