


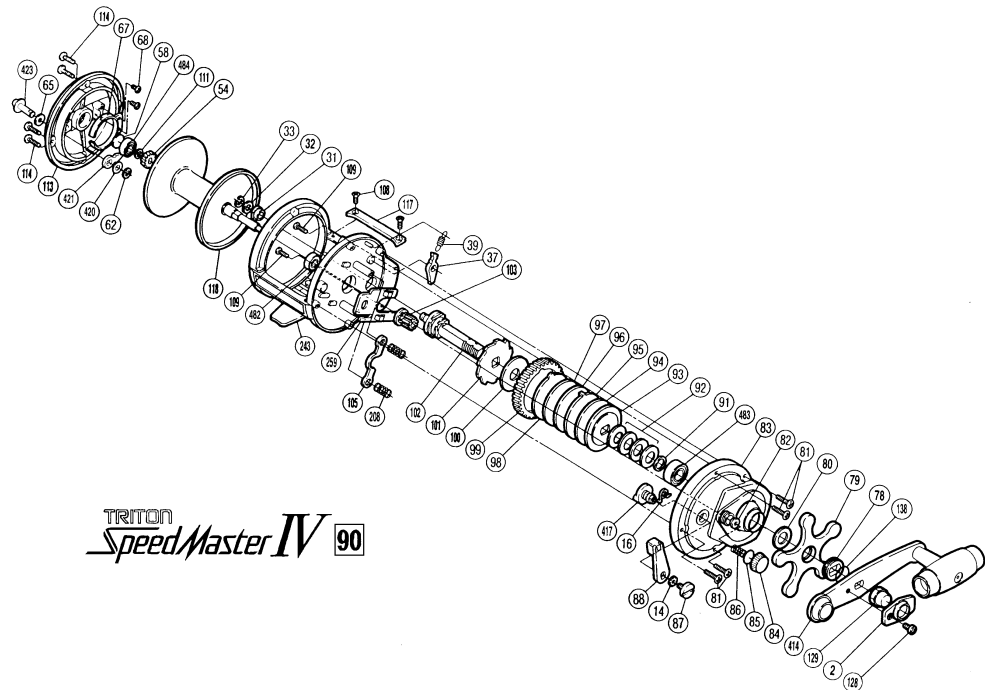

TGT No.	PARTS NAMES	TGT No.	PARTS NAMES	TGT No.	PARTS NAMES
0002	Handle Nut Plate	0084	Cast Control Cap	0109	Right Side Plate Screw (B)
0014	Lock Washer	0085	Spacer	0111	Click Gear Retainer
0016	Clutch Spring	0086	Spool Tension Spring	0113	Left Side Plate
0031	Drive Shaft Bushing	0087	Clutch Lever Screw	0114	Left Side Plate Screw
0032	Spacer	0088	Clutch Lever	0117	Line Guard
0033	Drive Shaft Retainer	0091	Bearing Thrust Washer	0118	Spool
0037	Anti-Reverse Pawl	0092	Drag Spring Washer	0128	Handle Nut Plate Screw
0039	Anti-Reverse Pawl Spring	0093	Key Washer "F"	0129	Handle Nut
0054	Click Gear	0094	Drag Washer "D"	0138	"O" Ring
0058	Spacer "B"	0095	Eared Washer "E"	0208	Yoke Spring
0062	Click Pawl Retainer	0096	Drag Washer "I"	0243	Frame
0065	Spacer A	0097	Key Washer "C"	0259	Yoke Plate
0067	Click Spring	0098	Eared Washer "B"	0414	Handle Assembly
0068	Click Spring Screw	0099	Drive Gear	0417	Clutch Cam
0078	Handle Washer	0100	Drive Shaft Washer	0420	Spacer B
0079	Star Drag	0101	Anti-Reverse Ratchet	0421	Click Pawl
0080	Star Drag Washer	0102	Drive Shaft	0423	Click Button
0081	Right Side Plate Screw (A)	0103	Pinion Gear	0482	Ball Bearing
0082	Spool Shaft Bushing	0105	Yoke	0483	Ball Bearing
0083	Right Side Plate	0108	Line Guard Screw	0484	Ball Bearing