DAIWA

BAITCASTING REEL

PXBF70XHL

*Please order by parts number, not key number.

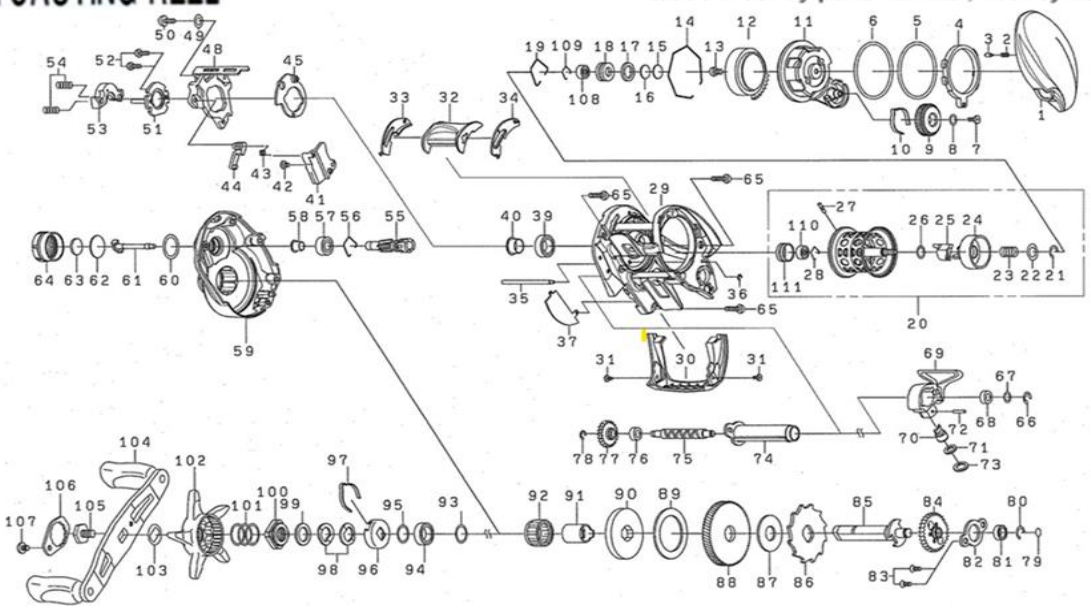

Key No	Part No	Description
1	M00-7401	RIGHT SIDE PLATE
2	J63-1901	LEVER PLATE SPRING
3	J28-6301	LEVER PLATE PIN
4	J95-7101	LEVER PLATE (A)
5	J95-7201	LEVER PLATE (B)
6	J95-7303	LEVER PLATE (C)
7	G94-0402	BRAKE DIAL SCREW
8	H15-9202	BRAKE DIAL WASHER
9	J74-1806	BRAKE DIAL
10	H66-3401	BRAKE DIAL LEAF SPRING
11	M00-7701	SET PLATE
12	J95-7401	MAG HOLDER
13	H66-6002	MAGNET HOLDER SCREW
14	J95-7601	MAGNET HOLDER RETAINER
15	375-7404	RS SPOOL ADJUST WASHER (A)
16	375-7411	RS SPOOL ADJUST WASHER (B)
17	F57-4303	RS SPOOL ADJUST WASHER (C)
18	J38-3801	SPOOL BEARING HOLDER
19	E21-9701	SPOOL BEARING HOLDER RETAINER
20	Z02-8294	SPOOL ASSEMBLY
29	M00-7001	FRAME
30	J95-6602	FRONT COVER
31	H53-1508	FRONT COVER SCREW
32	J95-6101	CLUTCH LEVER
33	J95-5601	CLUTCH LEVER PLATE (L)
34	J95-5501	CLUTCH LEVER PLATE (R)
35	M13-4001	STABILIZER BAR
36	H70-4101	STABILIZER BAR RETAINER
37	J95-5701	FRAME PLATE
39	G43-1004	PINION BALL BEARING (A)
40	M51-8401	PINION BEARING COLLAR (A)
41	J76-5701	CLUTCH TRIP LEVER PLATE
42	H53-1508	CLUTCH TRIP LEVER PLATE SCREW
43	M04-2701	CLUTCH TRIP LEVER PLATE SPRING
44	J63-8601	CLUTCH TRIP LEVER
45	J76-5601	CLUTCH CAM PLATE (A)
48	J95-5801	CLUTCH CAM
49	M07-0001	CLUTCH CAM WASHER
50	B36-0406	CLUTCH CAM SCREW
51	H65-9101	CLUTCH CAM PLATE (B)
52	B03-2904	CLUTCH CAM PLATE SCREW
53	H94-4401	YOKE
54	J31-3901	YOKE SPRING
55-88	Z02-5496	PINION DRIVE GEAR SET
56	H44-8401	PINION BEARING RETAINER
57	B35-8608	PINION BALL BEARING (B)
58	J72-4601	PINION BEARING COLLAR (B)
59	M63-3601	LEFT SIDE PLATE
60	J27-9701	ZERO ADJUSTER KNOB O RING

Key No	Part No	Description
61	G93-1001	PINION SHAFT
62	H16-1001	ZERO ADJUSTER WASHER (A)
63	B17-5503	ZERO ADJUSTER WASHER (B)
64	J73-8101	ZERO ADJUSTER KNOB
65	G94-5818	LEFT SIDE PLATE SCREW
66	320-5901	WORM SHAFT RETAINER
67	B41-1702	WORM SHAFT WASHER
68	G72-0001	WORM SHAFT BUSHING
69	M14-8601	LEVELWIND
70	J74-0101	LINE GUIDE PAWL
71	G09-9803	PAWL WASHER
72	J74-0201	LEVELWIND PIN
73	G25-2202	PAWL O RING
74	J76-5801	WORM SHIELD
75	J91-2601	WORM SHAFT
76	G72-0001	WORM SHAFT BUSHING
77	J69-3901	WORM SHAFT GEAR
78	B33-9801	WORM SHAFT GEAR RETAINER
79	G09-9801	DRIVE SHAFT WASHER
80	320-8002	DRIVE SHAFT RETAINER
81	G46-6202	DRIVE SHAFT BALL BEARING
82	J69-3701	DRIVE SHAFT PLATE
83	G29-7002	DRIVE SHAFT PLATE SCREW
84	J69-3601	WORM GEAR
85	M00-7601	DRIVE SHAFT
86	H66-0901	RATCHET
87	374-6605	DRIVE GEAR WASHER
89	H35-9002	DRAG WASHER
90	J69-4401	KEY WASHER
91	J37-7801	CLUTCH RING
92	J54-0401	ONEWAY CLUTCH
93	B55-3804	DRIVE BEARING WASHER (A)
94	B86-1705	DRIVE BALL BEARING
95	B55-3801	DRIVE BEARING WASHER (B)
96	F02-8203	CLICK SPRING HOLDER
97	F03-2401	CLICK LEAF SPRING
98	150-8901	DRAG SPRING WASHER
99	H92-9501	STAR DRAG WASHER
100	J14-1002	STAR DRAG METAL
101	J01-1901	STAR DRAG SPRING
102	J14-0001	STAR DRAG
103	F57-6601	HANDLE PLATE
104	M63-3201	HANDLE ASSEMBLY
105	J29-5501	HANDLE SCREW
106	H83-4504	HANDLE LOCK PLATE
107	G83-5502	HANDLE LOCK PLATE SCREW
108	G28-1602	SPOOL BALL BEARING
109	G63-9601	SPOOL BEARING RETAINER