DAIWA

ELECTRONIC REEL

Tanacom800

*Please order by parts number, not key number.

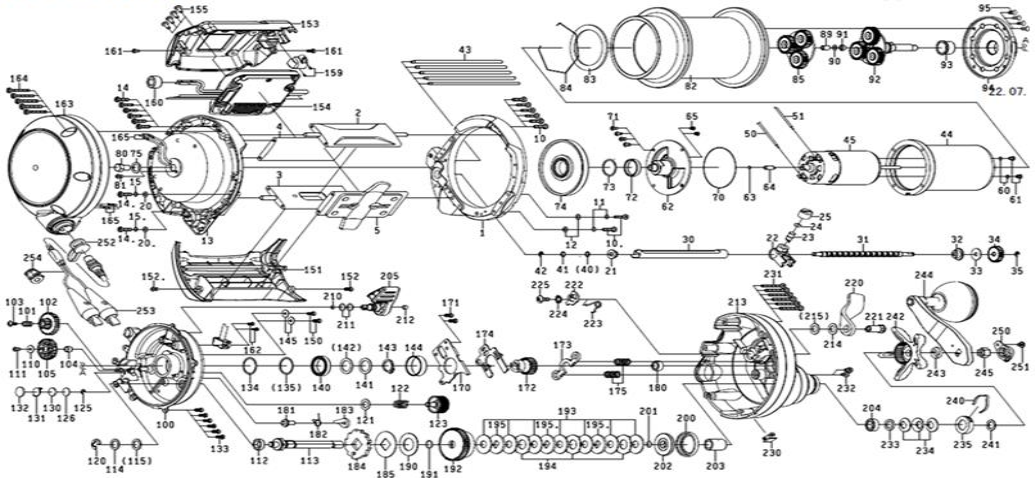

Key No	Part No	Description
1	M14-9801	RS RING
2	M20-1101	PARMING PLATE(A)
3	M15-8501	PARMING PLATE(B)
4	M21-2801	PARMING PLATE(C)
5	M15-7701	STAND
10	H75-3311	RS RING SCREW
11	M40-1001	RS RING SCREW WASHER(A)
12	F77-4603	RS RING SCREW WASHER(B)
13	M14-9901	LS SET PLATE
14	H75-3311	LS SET PLATE SCREW
15	M40-1001	LS SET PLATE SCREW WASHER(A)
20	F77-4603	LS SET PLATE SCREW WASHER(B)
21	F46-7201	WORM SHAFT COLLAR(A)
22	G81-2102	LEVEL WIND
23	122-0601	PAWL
24	F95-0201	PAWL WASHER
25	E35-4101	PAWL HOLDER NUT
30	M18-1601	WORM SHIELD
31	M35-3101	WORM SHAFT
32	J27-1001	WORM SHAFT COLLAR(B)
33	F23-7701	WORM SHAFT GEAR WASHER
34	M18-1501	WORM SHAFT GEAR
35	320-5901	WORM SHAFT RETAINER
40	B41-1703	BALANCE ADD WASHER(A)
41	B41-1706	WORM SHAFT WASHER
42	320-5901	WORM SHAFT RETAINER
43	M15-8701	POST
44	M16-0001	MOTOR HOLDER(A)
45	M18-1901	MOTOR
50	M21-2901	MOTOR CORD(RED)
51	M21-2902	MOTOR CORD(BLACK)
60	G21-3002	MOTOR HOLDER(A) SCREW O RING
61	351-6101	MOTOR HOLDER(A) SCREW
62	M16-0201	MOTOR HOLDER(B)
63	F64-7202	MOTOR COLLAR WASHER
64	M26-0301	MOTOR COLLAR
65	G43-7701	MOTOR HOLDER(B) PACKING
70	J89-4101	MOTOR HOLDER(B) O RING
71	B55-7607	MOTOR HOLDER(B) SCREW
72	M18-2201	MOTOR HOLDER(B) COLLAR
73	F68-2602	MOTOR HOLDER(B) WASHER
74	M20-1001	MOTOR HOLDER(B) PLATE
75	375-3003	LS SET PLATE WASHER
80	M19-8201	LS SET PLATE SCREW(A)
81	B55-7607	LS SET PLATE SCREW(B)
82	M35-3301	SPOOL
83	M25-5301	MOTOR HOLDER(A) WASHER
84	M25-5401	MOTOR HOLDER(A) RING
85	M18-2801	SPOOL GEAR(A)
89	M38-9701	SPOOL GEAR COLLAR
90	F77-4604	SPOOL GEAR WASHER
91	E34-2401	SPOOL GEAR BEARING
92	M35-3501	SPOOL GEAR(B)
93	M18-2601	SPOOL PLATE COLLAR
94	M20-0101	SPOOL PLATE
95	B39-5506	SPOOL PLATE SCREW
100	M16-0401	SET PLATE
101	G07-6501	IDLE GEAR(A) COLLAR
102	G67-3301	IDLE GEAR(A)
103	351-1801	IDLE GEAR(A) SCREW
104	F57-3101	IDLE GEAR(B) COLLAR
105	F59-2101	IDLE GEAR(B)
110	F44-0201	IDLE GEAR(B) WASHER
111	B55-7607	IDLE GEAR(B) SCREW
112	G08-1901	GEAR SHAFT BUSH
113	M15-8901	GEAR SHAFT
114	375-5804	GEAR SHAFT WASHER
115	375-5802	BALANCE ADD WASHER(B)
120	320-7601	GEAR SHAFT RETAINER
121	J26-8201	ZERO ADJUSTER KNOB WASHER(A)
122	F38-8201	ZERO ADJUSTER KNOB SPRING
123	M20-0601	ZERO ADJUSTER KNOB
124	375-3003	ZERO ADJUSTER KNOB WASHER(B)
125	320-5901	ZERO ADJUSTER KNOB RETAINER
126	F67-3802	ZERO ADJUSTER WASHER(A)
130	B17-5504	ZERO ADJUSTER WASHER(B)
131	J05-6901	ZERO ADJUSTER WASHER(C)
132	G21-2401	ZERO ADJUSTER WASHER(D)
133	B55-7607	SET PLATE SCREW

Key No	Part No	Description
134	F68-2602	SPOOL PLATE BALL BEARING WASHER(A)
135	F68-2601	BALANCE ADD WASHER(C)
140	F38-9102	SPOOL PLATE BALL BEARING
141	G52-9505	SPOOL PLATE BALL BEARING WASHER(B)
142	G52-9503	BALANCE ADD WASHER(D)
143	M18-3201	SPOOL GEAR(B) RETAINER
144	M21-2701	SET PLATE COLLAR
145	F44-0201	SET PLATE COLLAR WASHER
150	B55-7607	SET PLATE COLLAR SCREW
151	M15-8003	FINGER COVER
152	B55-7607	FINGER COVER SCREW
153	M15-7901	IC MODULE COVER
154	M15-0003	IC MODULE
155	H74-1705	IC MODULE COVER SCREW(A)
159	H71-7101	SENSOR SCREW
160	M42-9301	FERRITE CORE
161	B55-7607	IC MODULE COVER SCREW(A)
162	H15-8201	SENSOR SCREW
163	M15-8301	LS PLATE
164	H75-3312	LS PLATE SCREW
165	G07-9501	CORD COVER
170	M18-1701	PLATE
171	B55-7607	PLATE SCREW
172	M15-9001	PINION GEAR
173	J27-3701	CLUTCH PLATE
174	J27-3602	SLIDE PLATE
175	G47-3401	CLUTCH PLATE SPRING
180	B18-1602	RS BALL BEARING
181	F77-3001	STOPPER PIN
182	G67-7701	STOPPER SPRING
183	J56-6301	STOPPER
184	J27-3901	RATCHET
185	J27-4101	RATCHET WASHER
190	H03-2903	DRIVE GEAR WASHER
191	F65-7801	GEAR SHAFT O RING
192	M34-4601	DRIVE GEAR
193	H11-8402	DRAG WASHER
194	F79-6101	DRAG LIP WASHER
195	G35-8501	DRAG DISC WASHER
200	G69-7601	DRAG PACKING
201	F65-7801	DRAG O RING
202	M09-3901	DRAG DISC COLLAR
203	M35-1401	DRAG COLLAR
204	G52-3401	HANDLE BALL BEARING
205	M15-9801	POWER LEVER
210	J03-7601	POWER LEVER O RING(A)
211	F65-7801	JOG POWER LEVER O RING(B)
212	G71-1001	JOG POWER LEVER COLLAR
213	M15-8201	RS PLATE
214	J26-8201	CLUTCH LEVER WASHER
215	373-7808	BALANCE ADD WASHER(E)
220	M19-8301	CLUTCH LEVER
221	M19-8401	CLUTCH LEVER SCREW
222	F59-7903	CLUTCH CAM
223	J27-5301	CLUTCH CAM SPRING
224	160-8001	CLUTCH CAM SPRING WASHER
225	353-8212	CLUTCH CAM SCREW
230	E28-6001	LINE STOPPER
231	H75-3312	RS PLATE SCREW(A)
232	H75-3313	RS PLATE SCREW(B)
233	373-7806	HANDLE BEARING WASHER
234	E25-3501	DRAG SPRING WASHER
235	H69-1901	DRAG HOLDER
240	H93-3201	DRAG LEAF SPRING
241	H92-9501	STAR DRAG WASHER
242	H93-3509	STAR DRAG
243	F86-3202	HANDLE COLLAR
244	M37-2601	HANDLE
245	F84-9901	HANDLE NUT
250	J21-3502	HANDLE CAP
251	G04-0803	HANDLE CAP SCREW
252	F66-1002	CONNECTOR CAP
253	M18-1801	CORD
254	G90-5401	FERRITE CORE
900	F18-7601	CLAMP SCREW
901	B93-7802	CLAMP SCREW WASHER
902	F18-7801	CLAMP SCREW NUT
903	041-9901	CLAMP PLATE
904	342-5301	CLAMP PLATE NUT