VAN STAAL®

**VR200**

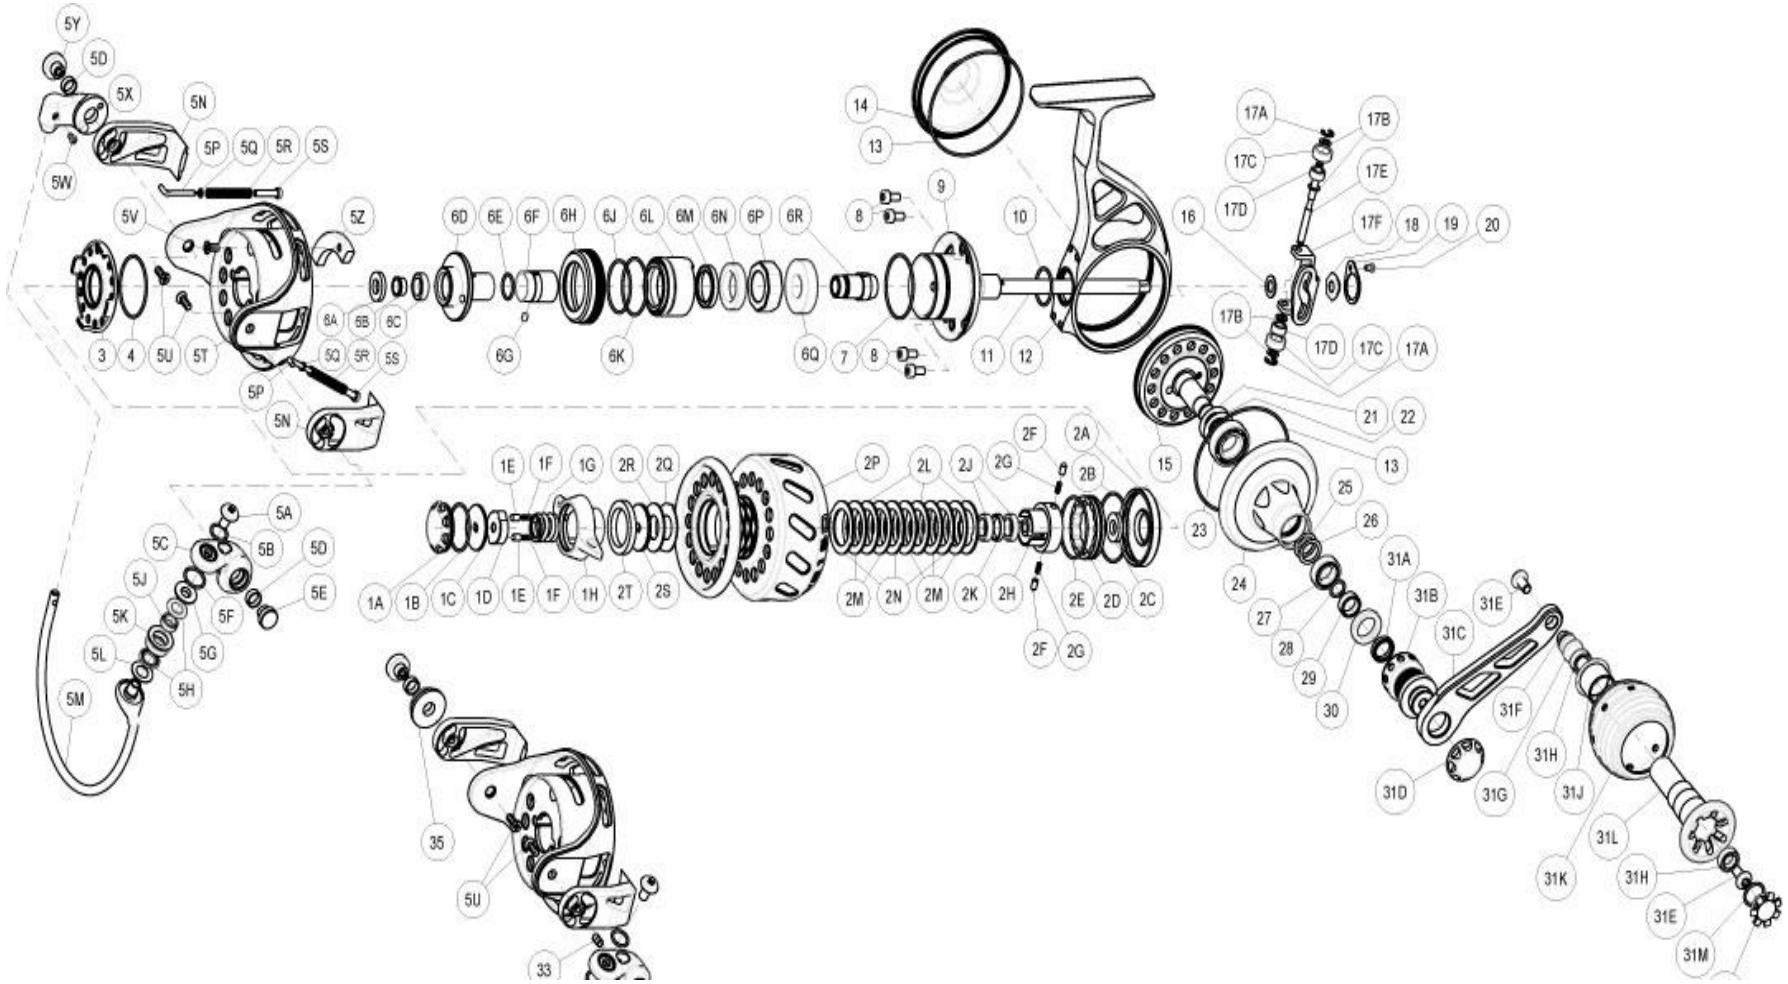

# VAN STAAL VR200 PART LIST

| Key # | Description | Part No. | Qty | Key # | Description | Part No. | Qty |
|---|---|---|---|---|---|---|---|
| 1 | Drag Knob Assembly include | VS332-01 | 1 | | 6N - Clutch Support Bearing | BGRS5 | 1 |
| | 1A - Drag Knob Cap | VR070-01 | 1 | | 6P - One Way Clutch | VR063-01 | 1 |
| | 1B - Drag Knob Cap O-Ring | VR105-01 | 1 | | 6Q - Pinion Gear Ball Bearing | BGR02 | 1 |
| | 1C - Drag Click Ratchet | VR060-01 | 1 | | 6R - Pinion Gear Assembly | VR311-01 | 1 |
| | 1D - Drag Nut | VR066-01 | 1 | 7 | Lock Ring O-Ring | VR101-01 | 1 |
| | 1E - Drag Click Pawl | VR103-01 | 2 | 8 | Body Neck Screw | VR054-01 | 4 |
| | 1F - Drag Click Spring | VR049-01 | 2 | 9 | Body Neck Assembly | VR341-01 | 1 |
| | 1G - Drag Spring | VR043-01 | 1 | 10 | Body Neck O-Ring | VR164-01 | 1 |
| | 1H - Drag Knob | VS032-01 | 1 | 11 | Spool Shaft | VR015-01 | 1 |
| 2 | Spool Assembly (Kit) include | VR321-40 | 1 | 12 | Body | VR001-01 | 1 |
| | 2A - Drag Cap | VR050-01 | 1 | 13 | Body Cover O-Ring | VS145-01 | 2 |
| | 2B - Drag Cap O-Ring | VS098-01 | 1 | 14 | Service Cover | VR024-01 | 1 |
| | 2C - Drag Cap Seal | VR171-01 | 1 | 15 | Drive Gear Assembly | VR312-01 | 1 |
| | 2D - Spool Click Ratchet | VR037-01 | 1 | 16 | Spool Shaft Spacer | VR026-01 | 1 |
| | 2E - Spool Click Ratchet O-Ring | VR145-01 | 1 | 17 | O/S Slider Assembly (Kit) include | VR4025-01 | 1 |
| | 2F - Spool Click Pawl | VR103-01 | 2 | | 17A - E-Clip | NX092-01 | 2 |
| | 2G - Spool Click Pawl Spring | VR049-01 | 2 | | 17B - O/S Slider Bearing Spacer | VR029-01 | 4 |
| | 2H - Drag Washer Keeper | VR082-01 | 1 | | 17C - O/S Slider Bearing Wear Ring | VR106-01 | 2 |
| | 2J - Spool Ball Bearing | CH027-02 | 2 | | 17D - O/S Slider Bearing | XX117-01 | 2 |
| | 2K - Spool Bearing Spacer | VR161-01 | 1 | | 17E - O/S Slider Bearing Shaft | VR115-01 | 1 |
| | 2L - Drag Washer Inner Lock | VR080-01 | 3 | | 17F - O/S Slider | VR025-01 | 1 |
| | 2M - Drag Disc | VR030-01 | 5 | 18 | M5x0.8 Hex Nut | VR014-01 | 1 |
| | 2N - Drag Washer Outer Lock | VR081-01 | 3 | 19 | Locking Plate | VR078-01 | 1 |
| | 2P - Spool | VR021-40 | 1 | 20 | Locking Plate Screw | VR051-01 | 1 |
| | 2Q - Front Drag key Washer | VS081-01 | 1 | 21 | Drive Gear Adjust Washer | DF035-02 | 0 |
| | 2R - Front Drag Disc | VS030-01 | 1 | 22 | Drive Gear Adjust Washer | DF035-05 | 0 |
| | 2S - Front Drag Washer | VS080-01 | 1 | 23 | Gear Bearing | CF017-03 | 1 |
| | 2T - Drag Knob Seal | VS171-01 | 1 | 24 | Body Cover | VR023-01 | 1 |
| 3 | Rotor Nut | VR006-01 | 1 | 25 | Body Cover Ball Bearing Adjust Washer | VR084-01 | 0 |
| 4 | Rotor Nut O-Ring | VR145-01 | 1 | 26 | Body Cover Ball Bearing Adjust Washer | VR084-02 | 0 |
| 5 | Rotor Assembly (Kit) include | VR4009-30 | 1 | 27 | Body Cover Ball Bearing | TW058-02 | 1 |
| | 5A - Line Slider Screw | VR108-01 | 1 | 28 | Handle Sleeve O-Ring | VR098-01 | 1 |
| | 5B - Line Slider Screw O-Ring | VS164-01 | 1 | 29 | Handle Sleeve | VS110-01 | 1 |
| | 5C - Bail Arm Lever | VR007-01 | 1 | 30 | Gear Shaft Seal | VS109-01 | 1 |
| | 5D - Arm Lever Bushing | VR158-01 | 2 | 31 | Handle Assembly include | VR318-01 | 1 |
| | 5E - Arm Lever Cap | VR113-01 | 1 | | 31A - Handle Stand Insert | VS158-01 | 1 |
| | 5F - Arm Lever O-Ring | VS101-01 | 1 | | 31B - Handle Stand | VS058-01 | 1 |
| | 5G - Line Roller Spacer "A" | VR016-01 | 1 | | 31C - Handle Arm | VR018-01 | 1 |
| | 5H - Line Roller Seal | VR262-01 | 2 | | 31D - Handle Cap | VS054-01 | 1 |
| | 5J - Line Roller Ball Bearing | CT157-02 | 1 | | 31E - Handle Knob Screw | VR077-01 | 2 |
| | 5K - Line Roller | VR004-01 | 1 | | 31F - Handle Knob Shaft | VR005-01 | 1 |
| | 5L - Line Roller Spacer "B" | VR102-01 | 1 | | 31G - Handle Knob Seal | VR262-01 | 1 |
| | 5M - Bail Assembly | VR347-30 | 1 | | 31H - Handle Knob Ball Bearing | VR028-01 | 2 |
| | 5N - Bail Spring Cover Support | VR046-01 | 2 | | 31J - Handle Knob Nut | VS014-01 | 1 |
| | 5P - Bail Spring Link | VS095-01 | 2 | | 31K - Handle Knob | VR013-01 | 1 |
| | 5Q - Bail Spring Spacer | VR048-01 | 2 | | 31L - Handle Knob Hub | VR003-01 | 1 |
| | 5R - Bail Spring | VR022-01 | 2 | | 31M - Handle Knob Cap O-Ring | VS101-01 | 1 |
| | 5S - Bail Spring Pivot | VR095-01 | 2 | | 31N - Handle Knob Cap | VR073-01 | 1 |
| | 5T - Rotor | VR009-30 | 1 | | 31A - Handle Stand Insert | VS158-01 | |
| | 5U - Bail Spring Cover Screw | VR057-01 | 2 | | 31B - Handle Stand | VS058-01 | |
| | 5V - Counter Weight Screw | VR057-02 | 1 | | 31C - Handle Arm | VR018-01 | |
| | 5W - Bail Holder Screw | VR051-01 | 1 | | 31D - Handle Cap | VS054-01 | |
| | 5X - Bail Holder | VR017-01 | 1 | | 31E - Handle Knob Screw | VR077-01 | |
| | 5Y - Bail Holder Cap | VS113-01 | 1 | | 31F - Handle Knob Shaft | VR005-01 | |
| | 5Z - Counter Weight | VS148-01 | 1 | | 31G - Handle Knob Seal | VR262-01 | |
| 6 | Clutch Housing Assembly (Kit) include | VR4038-01 | 1 | | 31H - Handle Knob Ball Bearing | VR028-01 | |
| | 6A - Spool Shaft Guide Seal | VR171-01 | 1 | | 31J - Handle Knob Nut | VS014-01 | |
| | 6B - Spool Shaft Bearing Bushing | VR259-01 | 1 | | 31K - Handle Knob | VR013-01 | |
| | 6C - Spool Shaft Bearing | CH027-02 | 1 | | 31L - Handle Knob Hub | VR003-01 | |
| | 6D - Spool Shaft Guide Assembly | VR375-01 | 1 | | 31M - Handle Knob Cap O-Ring | VS101-01 | |
| | 6E - Spool Shaft Guide O-Ring | VS101-01 | 1 | | 31N - Handle Knob Cap | VR073-01 | |
| | 6F - Clutch Sleeve | VR139-01 | 1 | | | | |
| | 6G - Clutch Sleeve Pin | VR149-01 | 1 | 32 | Line Slider - Manual Pick up | VS010-01 | 1 |
| | 6H - Lock Ring | VR122-01 | 1 | 33 | Arm Lever Locking Pin | VR085-01 | 1 |
| | 6J - Clutch Housing O-Ring "B" | ORR8 | 1 | 34 | Arm Lever Spacer Washer | VR109-01 | 1 |
| | 6K - Clutch Housing O-Ring "A" | VSB1591 | 1 | 35 | Balancer | VS017-01 | 1 |
| | 6L - Clutch Housing | VR038-01 | 1 | 5U | Bail Spring Cover Screw | VR057-01 | 2 |
| | 6M - Main Seal | OSPR6 | 1 | | | | |